

ROBINET DE CUISINE À DOUCHETTE AMOVIBLE


PULL-DOWN KITCHEN FAUCET

GUIDE D'INSTALLATION

INSTALLATION GUIDE


OUTILS NÉCESSAIRES

TOOLS REQUIRED

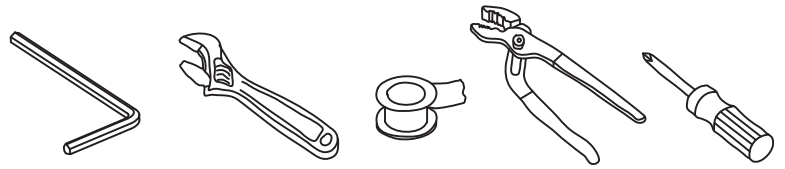


ÉTAPE 1 **Coupez l'alimentation d'eau avant de commencer l'installation.**
STEP 1 **Shut off the main water supply before beginning installation.**


ÉTAPE 2
STEP

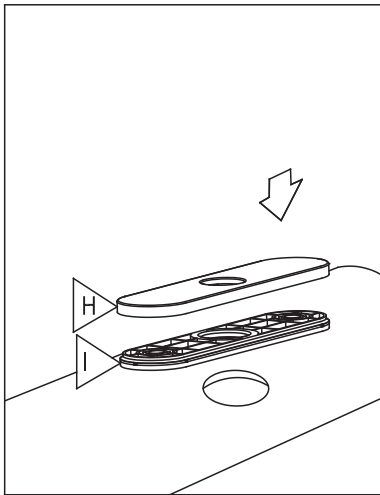


ÉTAPE 3
STEP

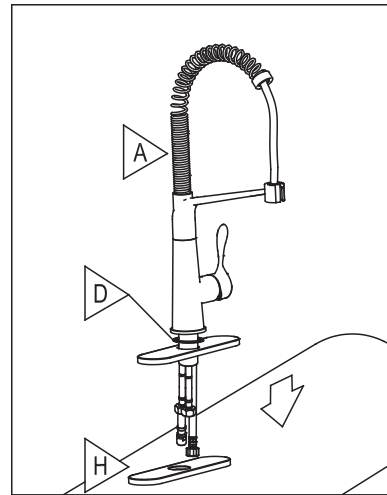

ÉTAPE 4
STEP

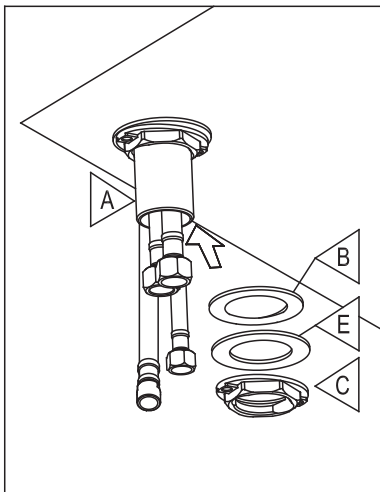

ÉTAPE 5
STEP

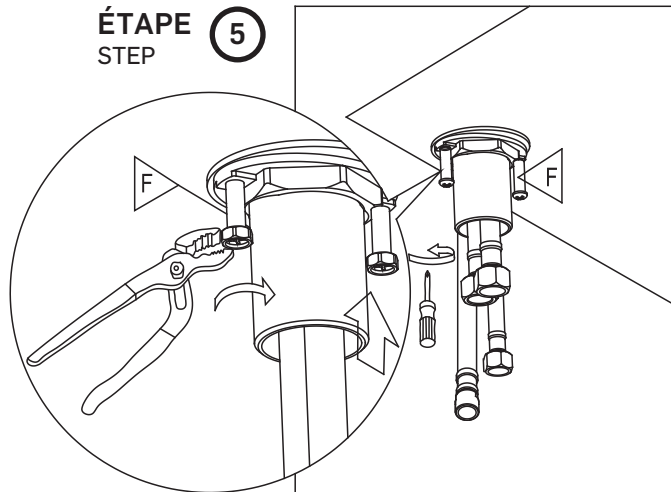


TS0421

SERGIO	FINI CHROME FINISH
3051919	TASSILI.CA




TASSILI SUPRA®


ÉTAPE 6
STEP

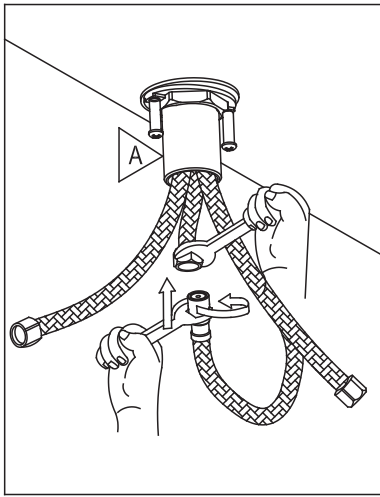


ÉTAPE 7
STEP

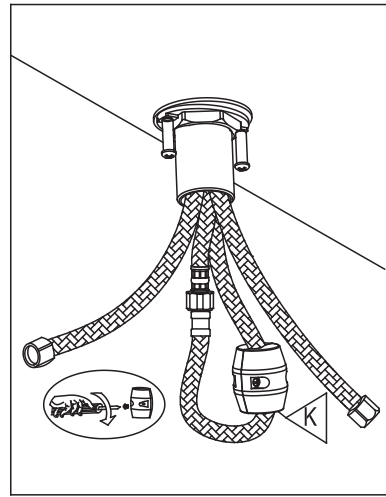

ÉTAPE 8
STEP

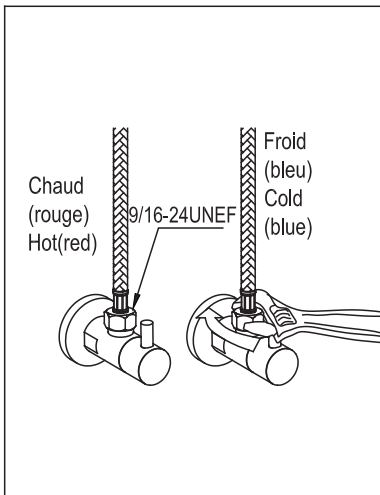

ÉTAPE 9
STEP

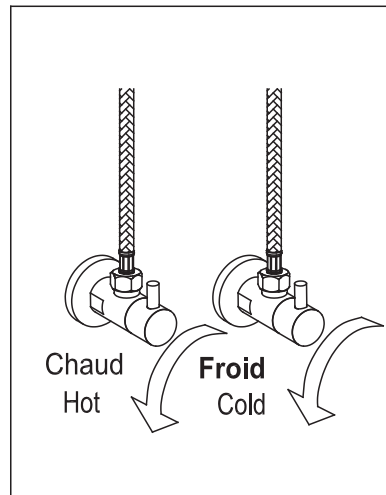

ROBINET DE CUISINE À DOUCHETTE AMOVIBLE


PULL-DOWN KITCHEN FAUCET

GUIDE D'INSTALLATION

INSTALLATION GUIDE


ÉTAPE
STEP

10

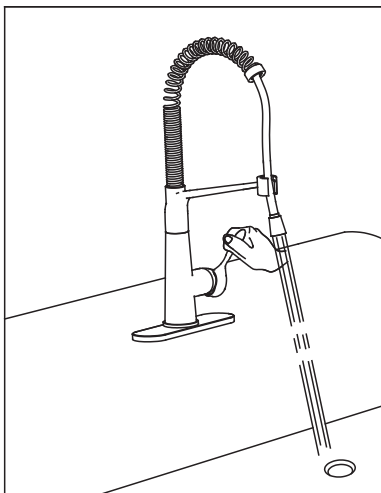


ÉTAPE
STEP

11

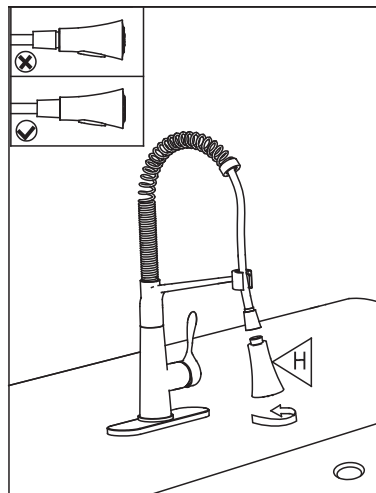


ÉTAPE
STEP

12

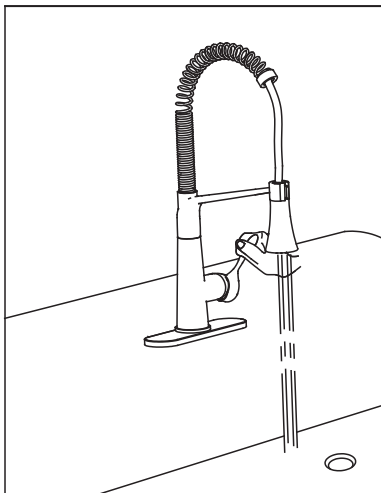

ÉTAPE
STEP

13

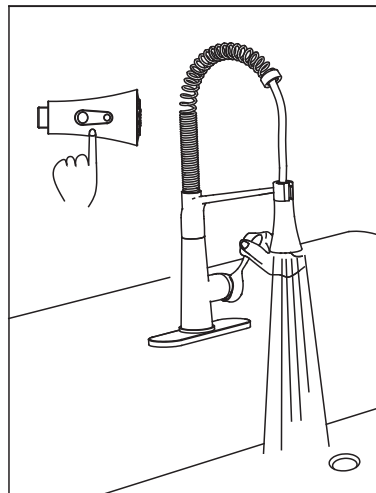

TS0421

*IMPORTANT: Aucune construction ne devrait être effectuée par l'installateur sans avoir le produit en main. Les mesures pourraient varier en raison de perfectionnements apportés au produit au fil du temps. Ni le fabricant, ni le distributeur ne pourront être tenus responsables d'un écart entre les mesures présentées ici et les mesures réelles du produit. Ce produit devrait être installé par un professionnel certifié, conformément à la réglementation en vigueur.

*CAUTION: Never install unless you are in possession of the product. Measurements may vary as a result of improvements made to the product over time. Neither the manufacturer nor the distributor shall be liable for variances between the measurements shown here and the product's actual measurements. This product should be installed by a certified professional, in accordance with the regulations in effect.