


ROBINET DE CUISINE À DOUCHETTE RÉTRACTABLE

PULL-OUT KITCHEN FAUCET

GUIDE D'INSTALLATION
INSTALLATION GUIDE


OUTILS NÉCESSAIRES

TOOLS REQUIRED

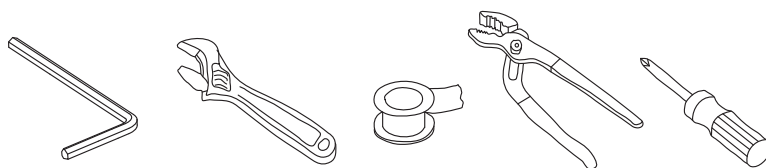


ÉTAPE 1 **1** Coupez l'alimentation d'eau avant de commencer l'installation.
STEP Shut off the main water supply before beginning installation.


ÉTAPE 2 **2**
STEP

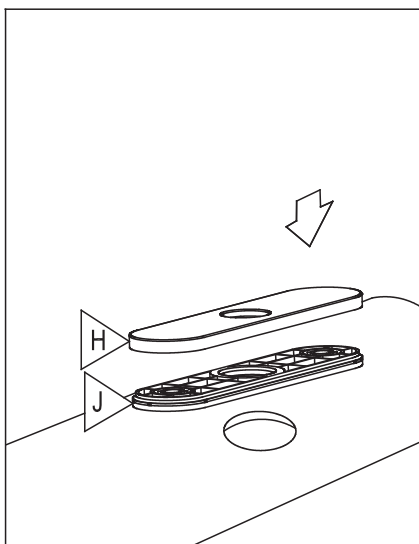


ÉTAPE 3 **3**
STEP

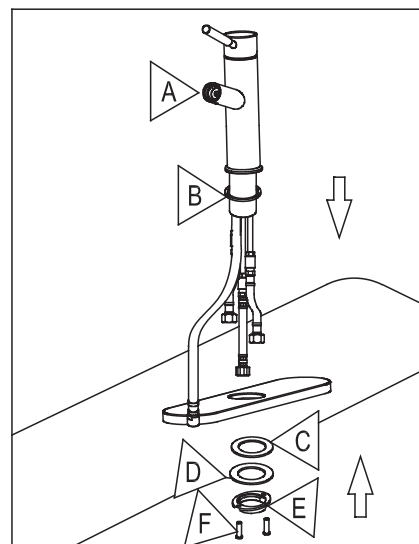

ÉTAPE 4 **4**
STEP

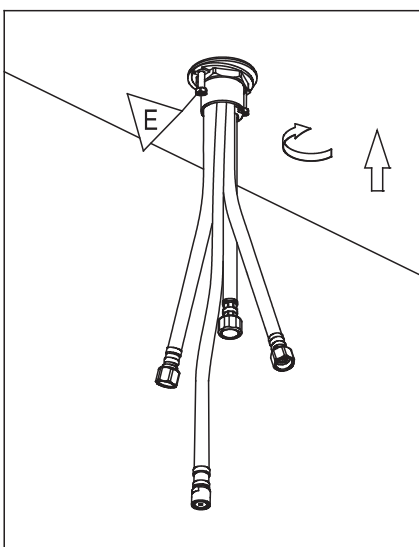

ÉTAPE 5 **5**
STEP

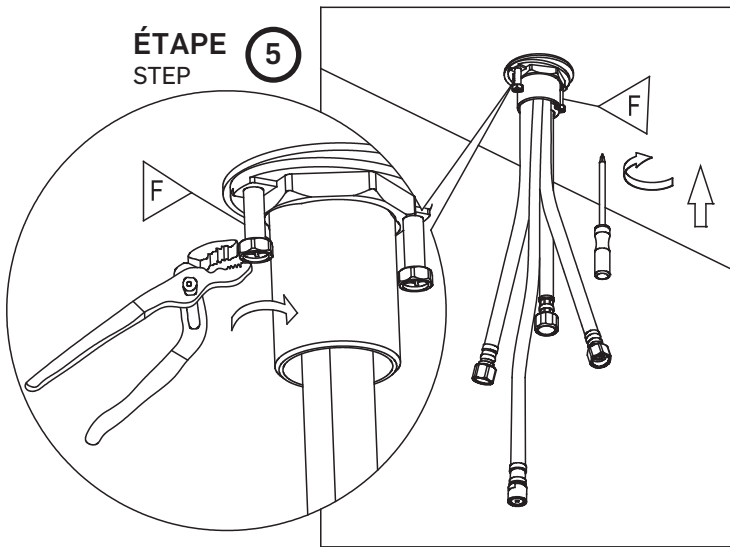

T0421

ANGELO

FINI CHROME FINISH


33001430

TASSILI.CA




TASSILI®


ÉTAPE 6
STEP

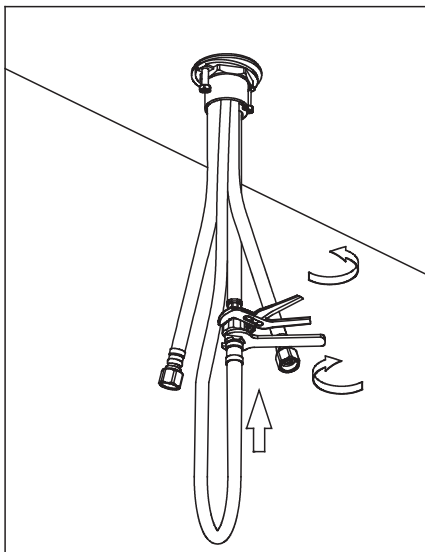


ÉTAPE 7
STEP

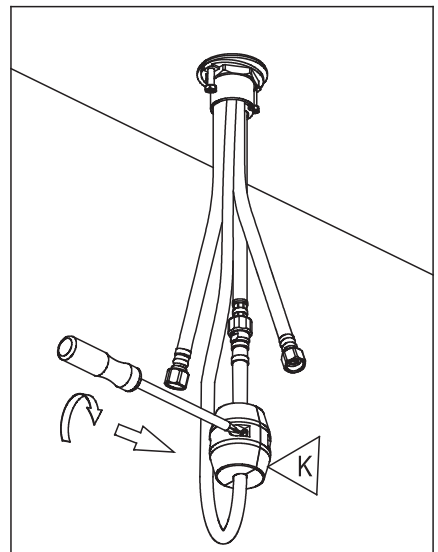

ÉTAPE 8
STEP

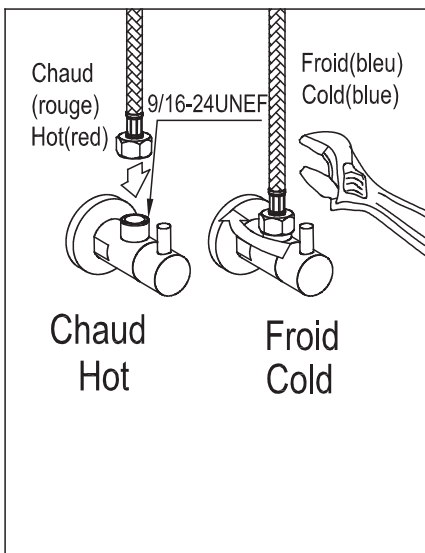

ÉTAPE 9
STEP

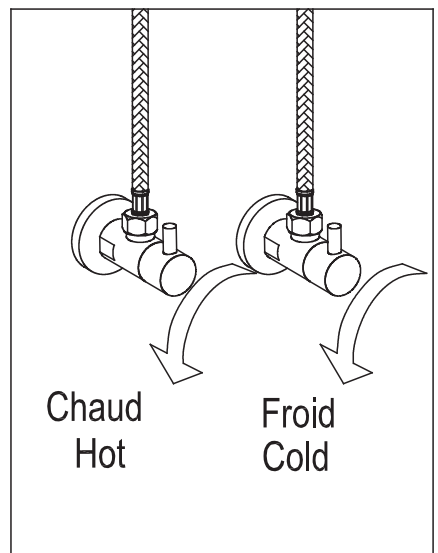


ROBINET DE CUISINE À DOUCHETTE RÉTRACTABLE

PULL-OUT KITCHEN FAUCET


GUIDE D'INSTALLATION

INSTALLATION GUIDE


ÉTAPE 10
STEP

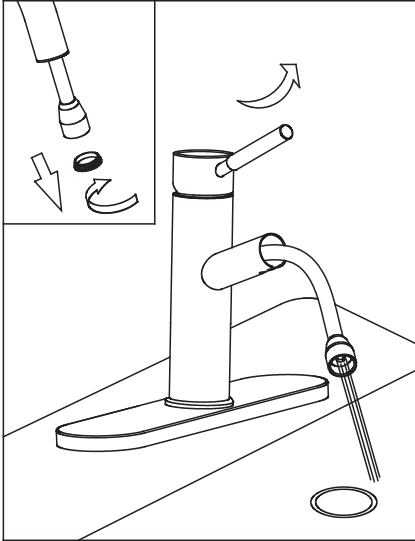


ÉTAPE 11
STEP

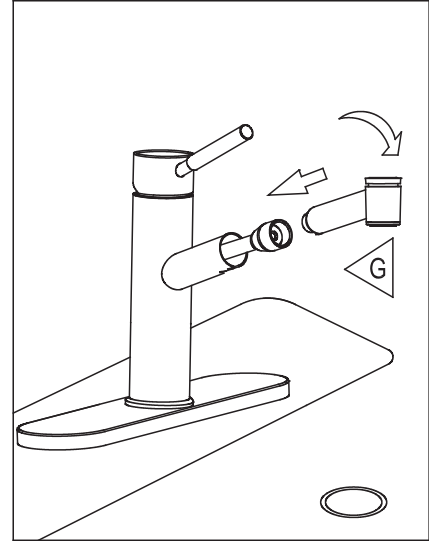

ÉTAPE 12
STEP

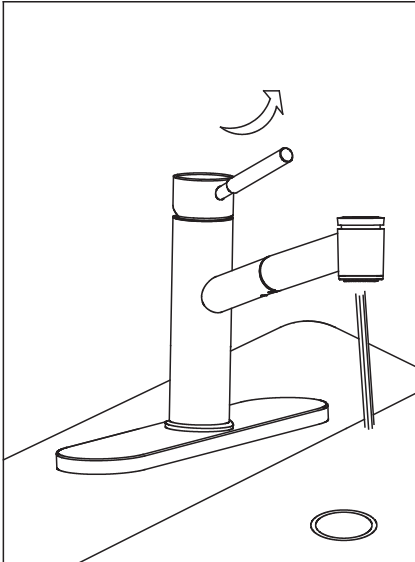

ÉTAPE 13
STEP

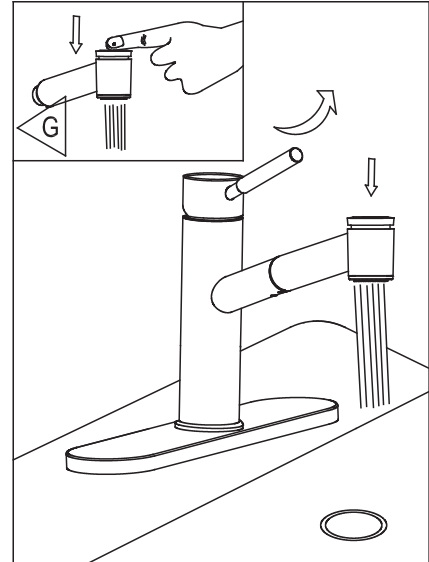

T0421

* IMPORTANT : Aucune construction ne devrait être effectuée par l'installateur sans avoir le produit en main. Les mesures pourraient varier en raison de perfectionnements apportés au produit au fil du temps. Ni le fabricant, ni le distributeur ne pourront être tenus responsables d'un écart entre les mesures présentées ici et les mesures réelles du produit. Ce produit devrait être installé par un professionnel certifié, conformément à la réglementation en vigueur.

* CAUTION: Never install unless you are in possession of the product. Measurements may vary as a result of improvements made to the product over time. Neither the manufacturer nor the distributor shall be liable for variances between the measurements shown here and the product's actual measurements. This product should be installed by a certified professional, in accordance with the regulations in effect.