


GUIDE D'INSTALLATION POUR TOILETTE MONOBLOC À DOUBLE CHASSE

Veillez lire attentivement ces consignes avant l'installation.

OUTILS RECOMMANDÉS :

- Ruban à mesurer
- Anneau de cire
- Mastic de plombier/joint d'étanchéité
- Bride de sol
- Clé à molette
- Boulons avec écrous et rondelles

1. Mettez la nouvelle cuvette à l'envers sur une pile de journaux et mettez un anneau de cire neuf, côté effilé vers le haut, sur l'ouverture du drain.

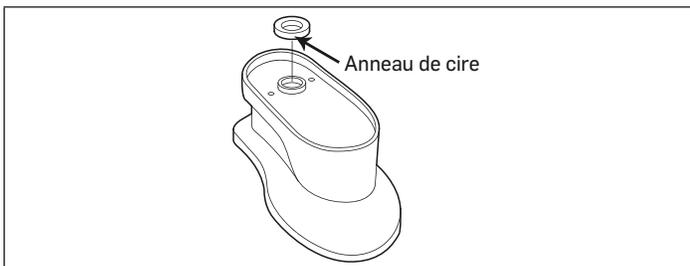


2. Insérez deux boulons neufs dans les trous de la bride de sol, en utilisant du mastic au besoin pour les maintenir en position verticale. Appliquez du mastic de plombier sur le pourtour de la base de la cuvette. Saisissez et retournez la cuvette, puis déposez-la délicatement au-dessus des boulons verticaux de la bride de sol. L'anneau de cire doit s'emboîter parfaitement dans la bride de sol.




3. Exercez une pression ferme sur la cuvette en la remuant légèrement dans tous les sens afin d'assurer une parfaite adhésion. L'excès de cire sortira sous pression tandis que la cuvette prendra sa position finale. Installez les rondelles et les écrous sur les boulons et serrez-les bien. Recouvrez les écrous avec capuchons remplis de mastic de plombier.

INSTALLATION OU AJUSTEMENT DU BOUTON-POUSSOIR


1. Enlevez l'écrou de l'assemblage du bouton-poussoir.

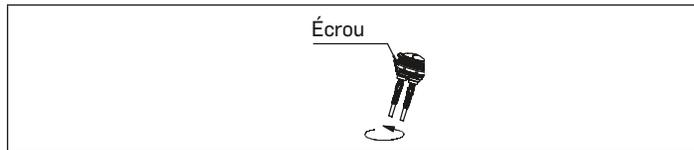


2. Poussez l'assemblage du bouton-poussoir par le couvercle du réservoir. Mettez l'écrou en place et le serrer (Ne serrez pas trop).

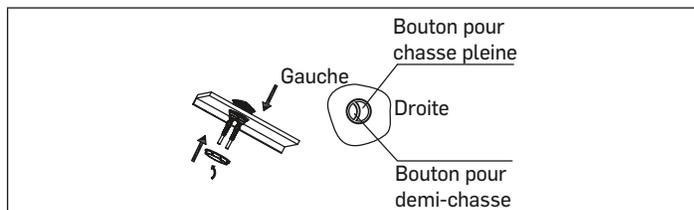

3. S'assurer que le bouton de chasse pleine est du côté droit pour qu'il puisse s'aligner avec «B» comme l'indique l'illustration.

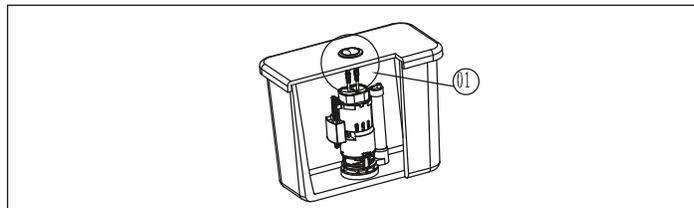

4. Les tiges pour chasse pleine et demi-chasse peuvent être ajustées en haut ou en bas en tournant les tiges dans le sens horaire (HAUT) et dans le sens anti-horaire (BAS).

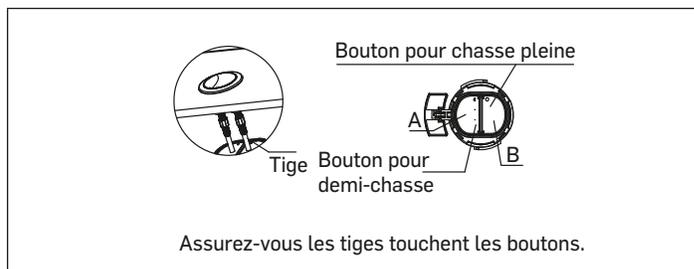

TASSILI SUPRA

INSTRUCTIONS GUIDE FOR ONE-PIECE DUAL FLUSH TOILET

Read these instructions carefully before installation.

SUGGESTED TOOLS:

- Measuring Tape/Ruler
- Wax Ring/Gasket
- Plumbers Putty/Caulking
- Floor Flange
- Crescent Wrench
- Fastening Bolts with Hardware

1. Place the new toilet bowl upside down on a padding of newspapers and put a new toilet gasket, tapered side up, over waste water opening.




2. Slide two fastening bolts into the slots in the floor flange, packing them with putty to hold them upright, if needed. Lay a rim of plumber's putty around the bowl's flange, pick up the new bowl, turn it right side up and lower it gently over the upright bolts in the floor flange. The wax gasket should meet the flange squarely.




3. Twist and rock bowl as you press it down firmly. As excess wax squeezes out, the bowl will settle into his final position. Install washers and nuts on the holds down bolts and securely tighten, but not tight enough to crack the bowl. Cover the nuts with caps filled with plumber's putty.

PUSH BUTTON INSTALLATION OR ADJUSTMENT


1. Remove nut from push button assembly.

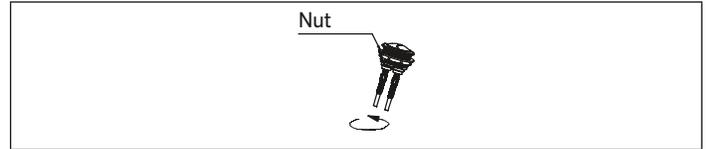


2. Place push button assembly through water tank lid. Fit nut and tighten (do not over-tighten).

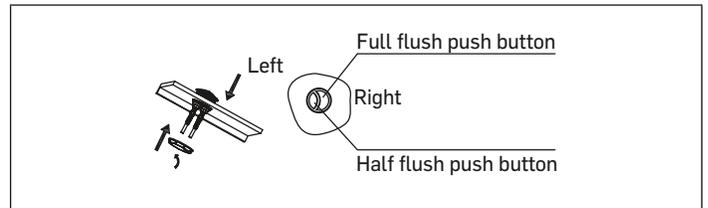

3. Ensure that the full flush button is on the right hand side so that it lines up with 'B' as shown in the diagram.

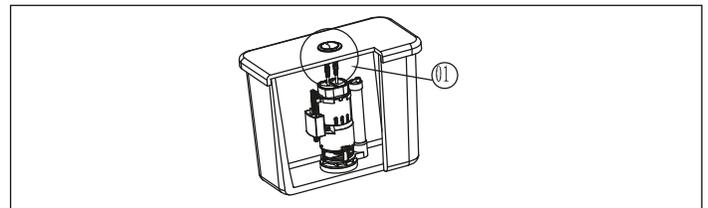

4. The rods for full and half flush can be adjusted up and down by turning the rods clockwise (UP) and counterclockwise (DOWN).

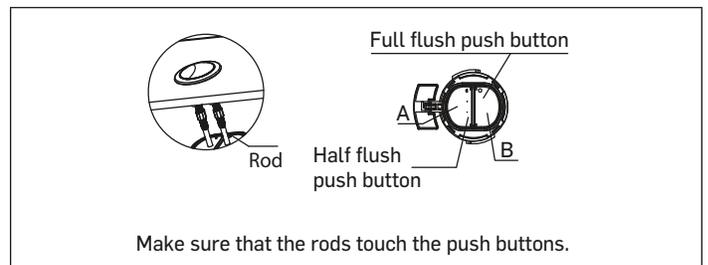

ROMEO

3021068

Made and packaged in China
Imported by NOVELCA
Québec, Canada G2E 5W2

TASSILI.CA

TASSILI SUPRA