

DOUCHETTE SUR BARRE MURALE

SLIDE BAR HAND SHOWER

GUIDE D'INSTALLATION

INSTALLATION GUIDE



OUTILS NÉCESSAIRES

TOOLS REQUIRED



ÉTAPE 1 **1** **Coupez l'alimentation d'eau avant de commencer l'installation.**
STEP **1** **Shut off the main water supply before beginning the installation.**


ÉTAPE 2 **2**
STEP **2**

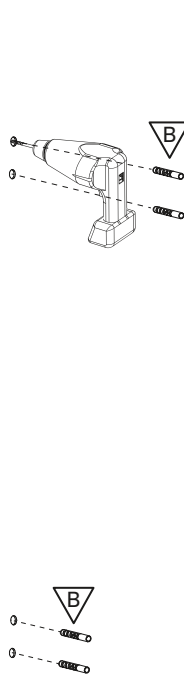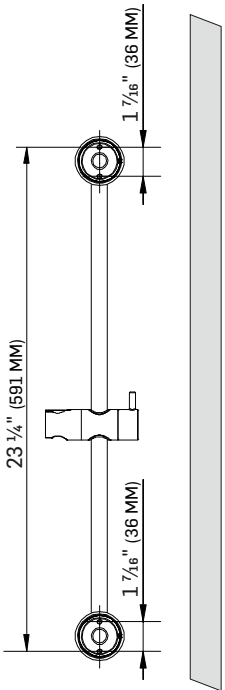


ÉTAPE 3 **3**
STEP **3**



ÉTAPE 4 **4**
STEP **4**

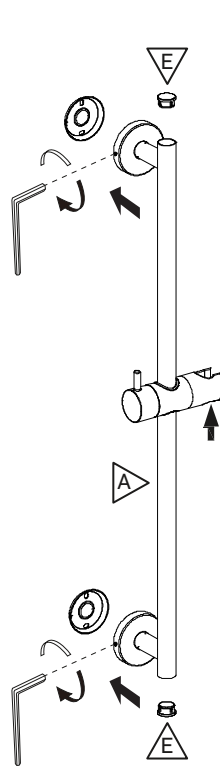

ÉTAPE 5 **5**
STEP **5**

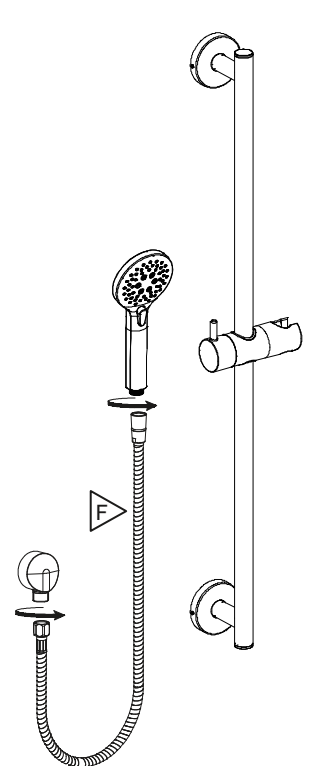

IMPORTANT : AUCUNE INSTALLATION NE DEVRAIT ÊTRE COMMENCÉE SANS AVOIR LE PRODUIT EN MAIN. LES MESURES POURRAIENT VARIER EN RAISON DE PERFECTIONNEMENTS APPORTÉS AU PRODUIT AU FIL DU TEMPS. NI LE FABRICANT, NI LE DISTRIBUTEUR NE POURRONT ÊTRE TENUS RESPONSABLES D'UN ÉCART ENTRE LES MESURES PRÉSENTÉES ICI ET LES MESURES RÉELLES DU PRODUIT. CE PRODUIT DEVRAIT ÊTRE INSTALLÉ PAR UN PROFESSIONNEL CERTIFIÉ, CONFORMÉMENT À LA RÉGLEMENTATION EN VIGUEUR.

CAUTION: NEVER INSTALL UNLESS YOU ARE IN POSSESSION OF THE PRODUCT. MEASUREMENTS MAY VARY AS A RESULT OF IMPROVEMENTS MADE TO THE PRODUCT OVER TIME. NEITHER THE MANUFACTURER NOR THE DISTRIBUTOR SHALL BE LIABLE FOR VARIANCES BETWEEN THE MEASUREMENTS SHOWN HERE AND THE PRODUCT'S ACTUAL MEASUREMENTS. THIS PRODUCT SHOULD BE INSTALLED BY A CERTIFIED PROFESSIONAL, IN ACCORDANCE WITH THE REGULATIONS IN EFFECT.

LOLA

33001387
 33001388
 TS2205

TASSILI.CA

FINI CHROME OU NOIR
 CHROME OR BLACK FINISH



TASSILI SUPRA®