


Toscane pergola 8'x8' with side panels

B080833- (2024)

Assembly Instructions

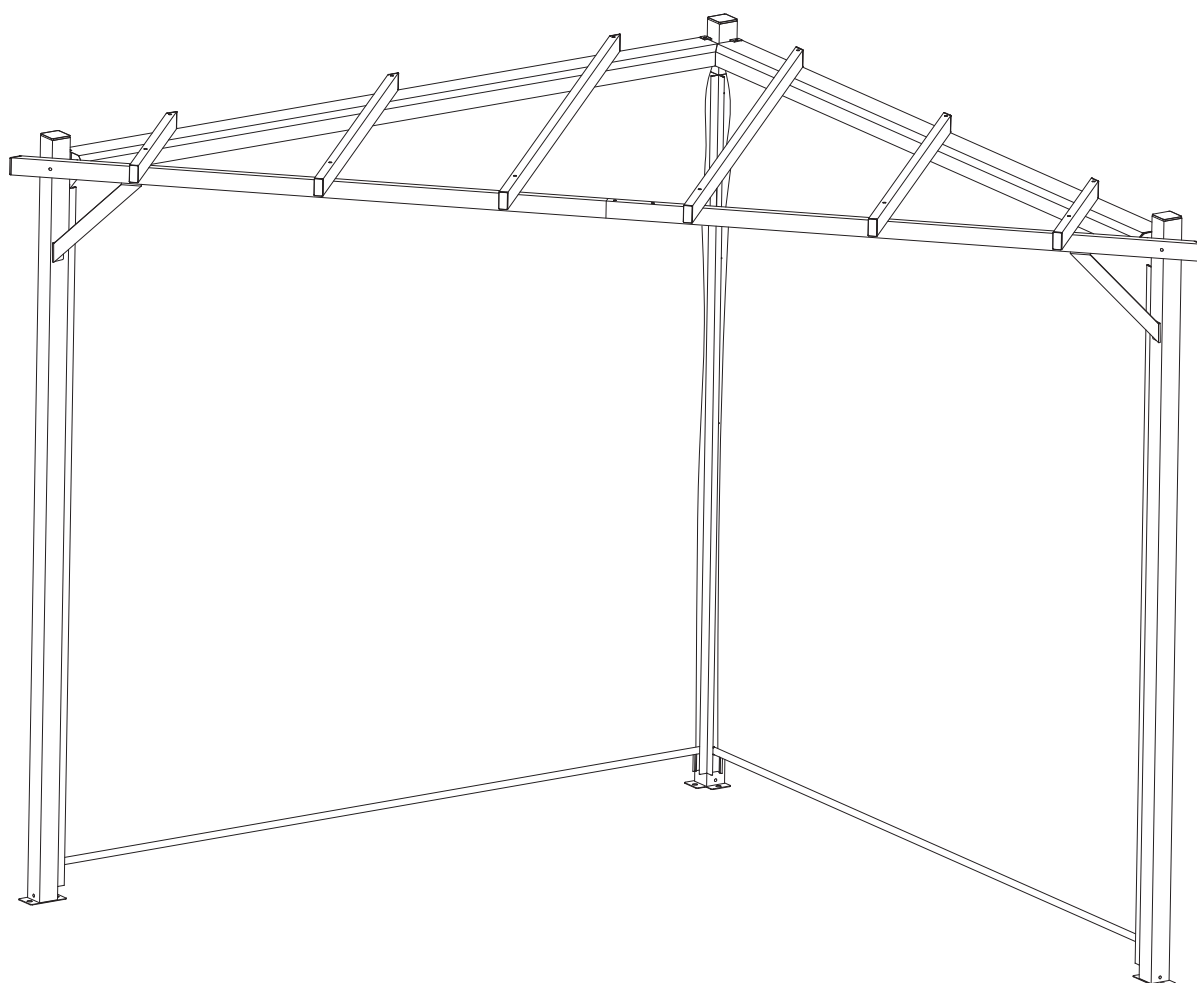

 **CORRIVEAU
ESSENTIELS**

IMPORTANT:

Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble. Each of the recommendations must be followed to ensure the utmost solidity.

Security Rules

Warning:

Keep flame and heat sources away from the pergola fabric. The fabric may burn if it is exposed to prolonged contact with a source of heat. The application of any foreign substance to the gazebo fabric may render the flame-resistant properties ineffective.

Regulation

It is the responsibility of the consumer being in accordance with city regulation, construction codes, zoning or any limitations and obtaining a permit prior assembling pergola.

Recommendation

- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of a personal injury and damage to parts.
- Do not use the pergola during extreme weather conditions.
- Before beginning assembly of products, make sure all parts are present. Compare parts with the package contents list. If any part is missing or damaged, do not attempt to assemble the product.
- Some parts may contain sharp edges. The use of protective gloves is always recommended.
- When installing and assembling your pergola, it is recommended that 2 or more adults are involved.
- Considering at least three hours to complete the installation, even well anchored, a pergola unit that is not finished assembling can get or create damages to nearby environment.
- Verify that all nuts and bolts are tightly secured before and during use.
- Use proper tools and equipment for a safe and compliant installation. Never climb, sit or stand on structure while assembling.
- Even if this gazebo is built for all year-round, the snow must be removed from the roof at all times.

- The curtains must be removed from the unit in freezing period.
- Anchoring bolts or other anchoring devices are not supplied.
- Keep away from any electric installation or transportation device.
- Always recommended keeping assembly manual for further reference.

Care

Avoid using a pressure washer. The use of a mild soap with warm water is the best solution for the frame only. A clear water rinse is necessary then. Never use soap on fabric, this will reduce their durability, consequently their lifespan and general look. The use of a soft brush and warm water are an excellent solution for cleaning the fabric.

Warranty

Covered

We warrant the frame and fabric to be free of manufacturing defects to the original purchaser for one year.

Not covered

This warranty does not cover commercial use, improper care, neglected storage, vandalism, chemicals, acts of nature, fire, oxidation, stains, freeze damage, improper packaging for return and unreasonable or abusive use. Normal discoloration and build-up snow are not covered either.


Customer service:

Consumer












For each part request, please contact your retailer with a description of the problem, pictures and consumer invoice copy, to ensure the proper information to proceed.

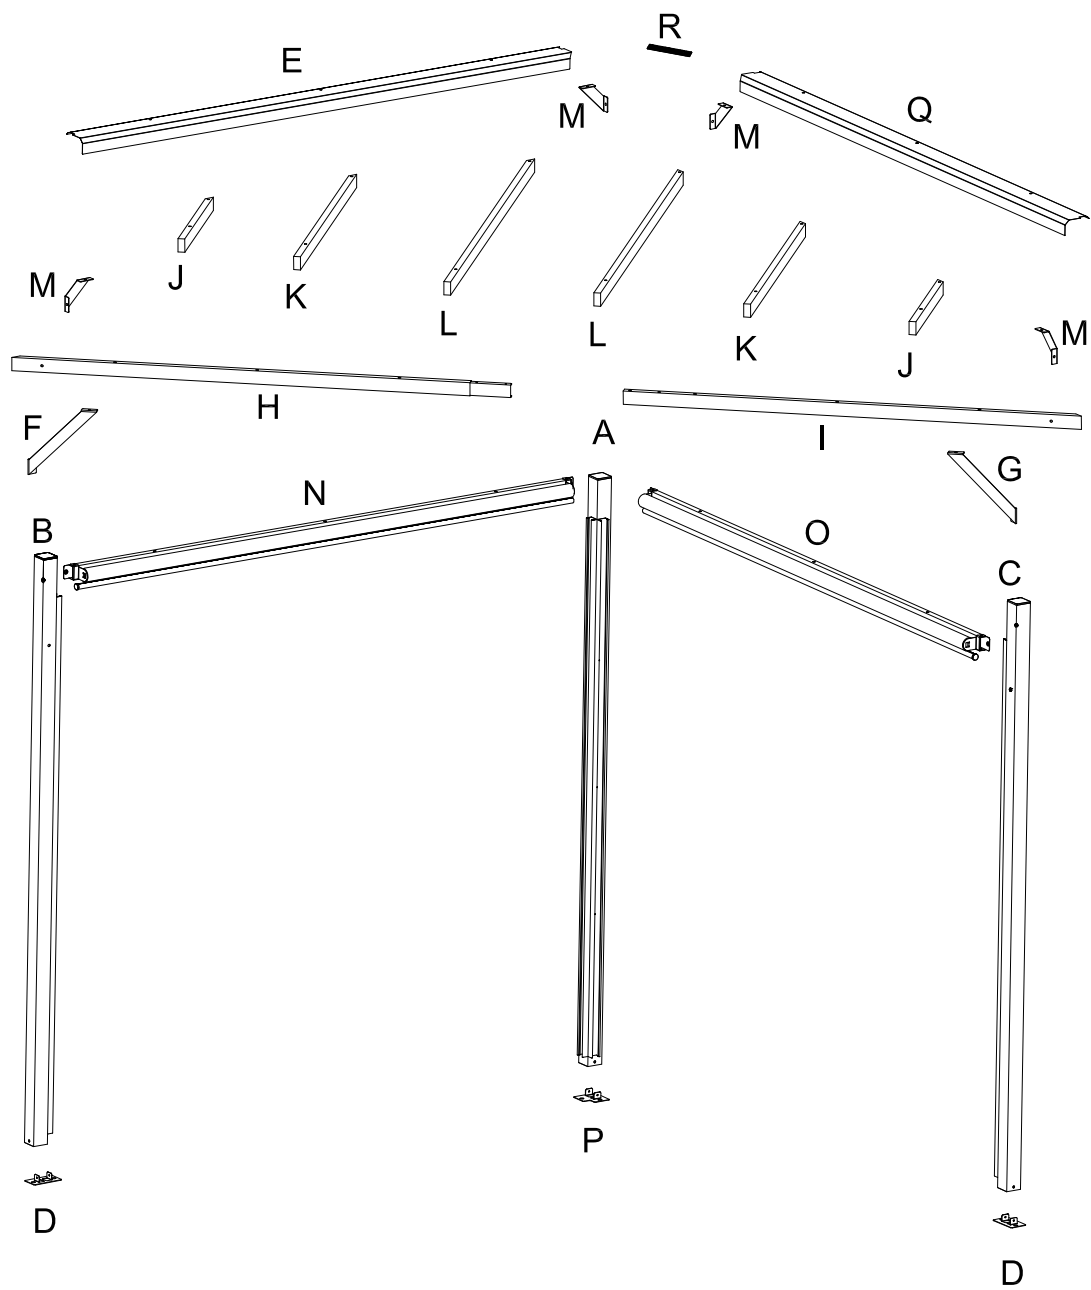






Seller

In addition to all the information already provided by the consumer, any parts requested must mention the person responsible for the client's file, the retailer name, address, branch if applicable, e-mail address, fax and phone number.se.







PARTS LIST:

NO	Description	Drawing	QTY
A	Post		1
B	Post		1
C	Post		1
D	Base flange		2
E	Side panel cover		1
F	Brace		1
G	Brace		1
H	Crossbar		1
I	Crossbar		1
J	Roof tube		2
K	Roof tube		2

NO	Description	Drawing	QTY
L	Roof tube		2
M	Brace		4
N	Crossbar		1
O	Crossbar		1
P	Base flange		1
Q	Side panel cover		1
R	Adhesive tape		1

Hardware Kit:


NO	Description	Drawing	QTY
AA	Bolt M6 x 15mm		26
BB	Bolt M6 x 40mm		2
CC	Bolt M6 x 70mm		12
DD	Allen key		1



A  1

C  1

B  1

D  2

P  1

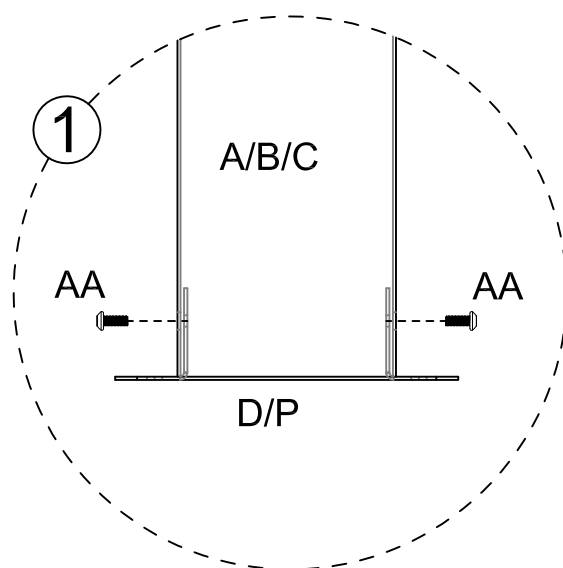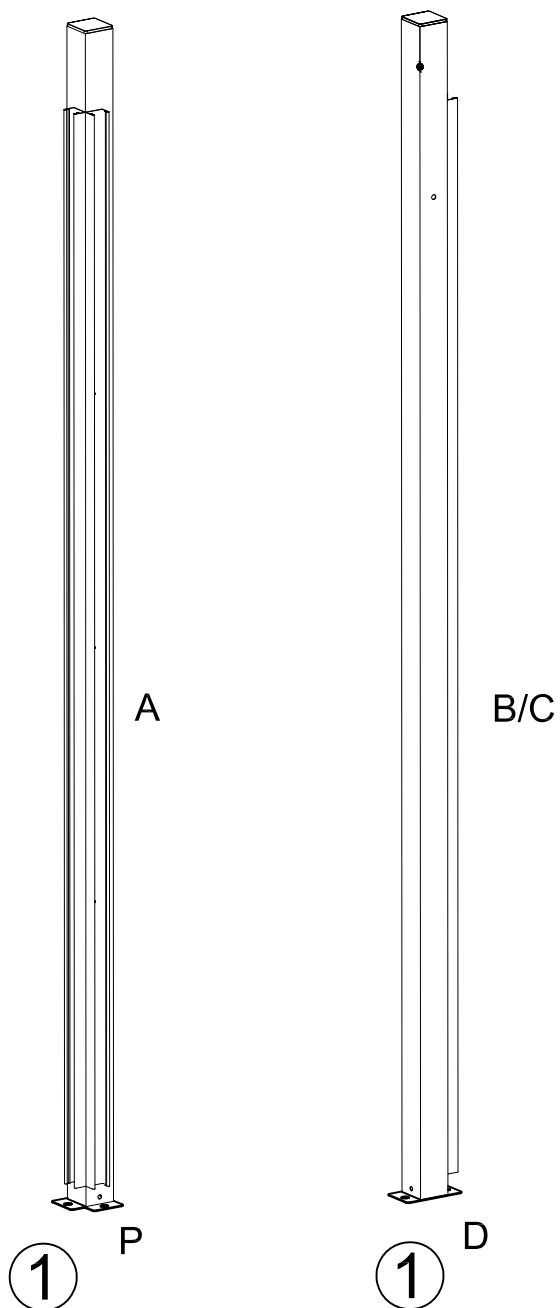

Step 1:


Bolts can be tightened completely. Fix the base flanges (D) to the bottom of the posts (B & C) by using the bolts M6x15mm (AA). Then repeat that step for the base flange (P) to the post (A) as shown.

H 1

I 1

N 1

O 1

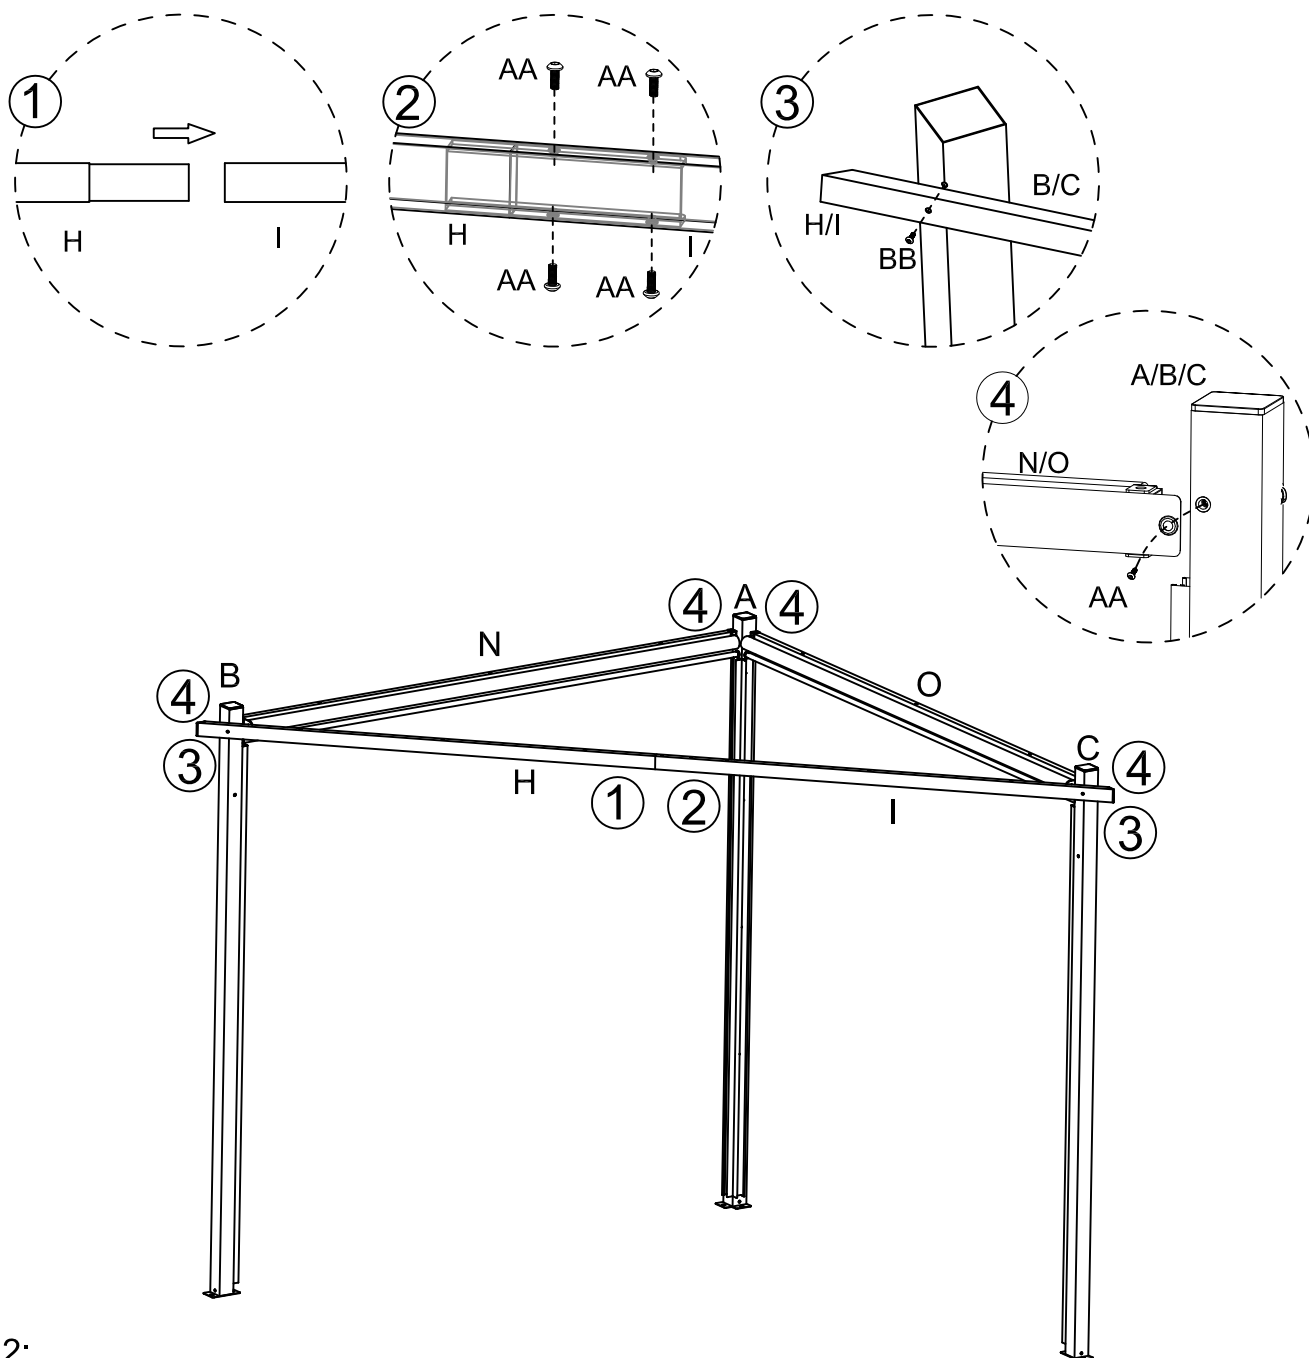



Step 2:

1. Bolts can be tightened completely. Insert the crossbar (H) into the crossbar (I) by using the bolts M6x15mm (AA) as shown in fig. 1 & 2.
2. Do not tight the bolts completely yet. Fix the crossbars (H/I, N & O) on the posts (A, B & C) by using the bolts M6x15mm (AA) & the bolts M6x40mm (BB) as shown in fig. 3 & 4.

F 1


G 1

M 4

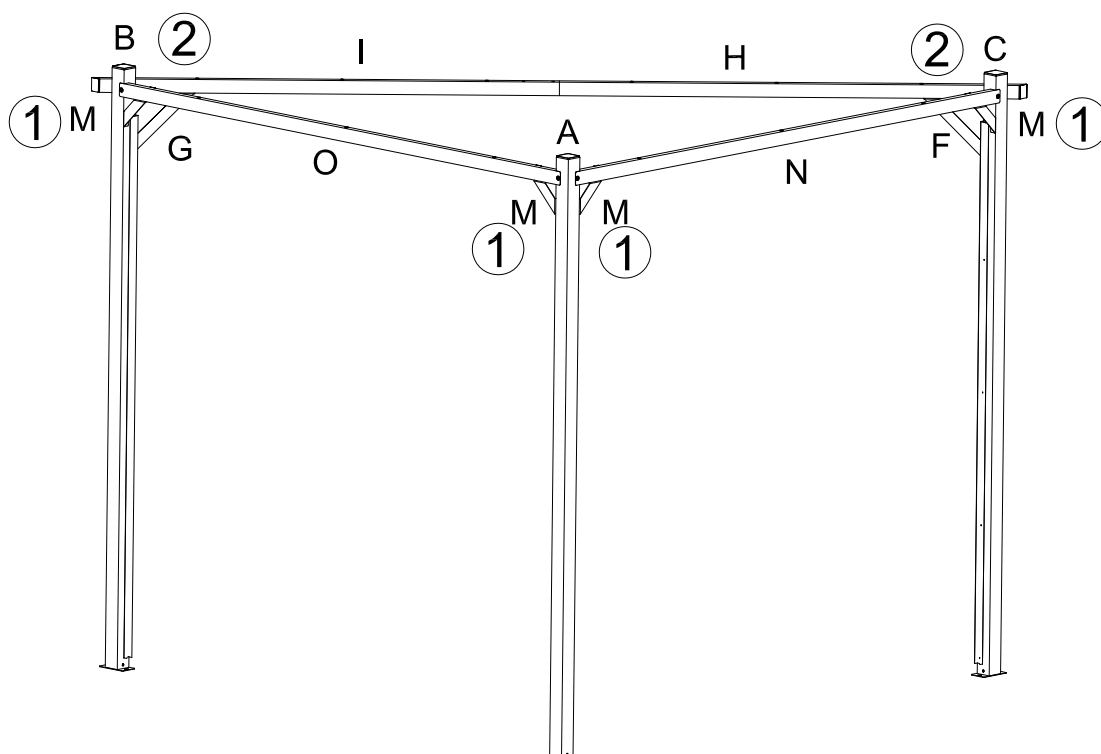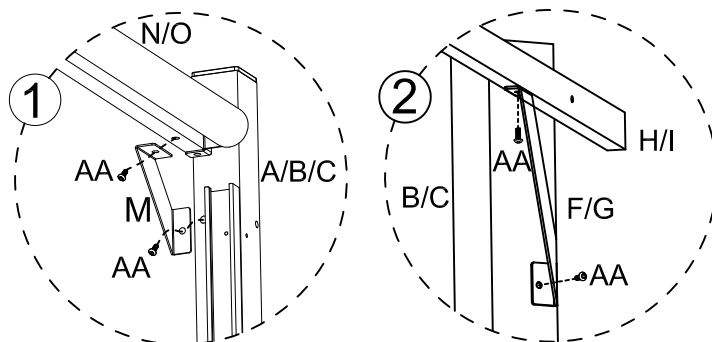

Step 3:




Do not tight the bolts completely yet. Fix the braces (F, G & M) to the posts (A, B & C) by using the bolts M6x15mm (AA). Then fix the other end of the braces (F, G & M) to the crossbars (H/I, N & O) by using the bolts M6x15mm (AA). Make sure the assembly is fully aligned and tighten all loose bolts.

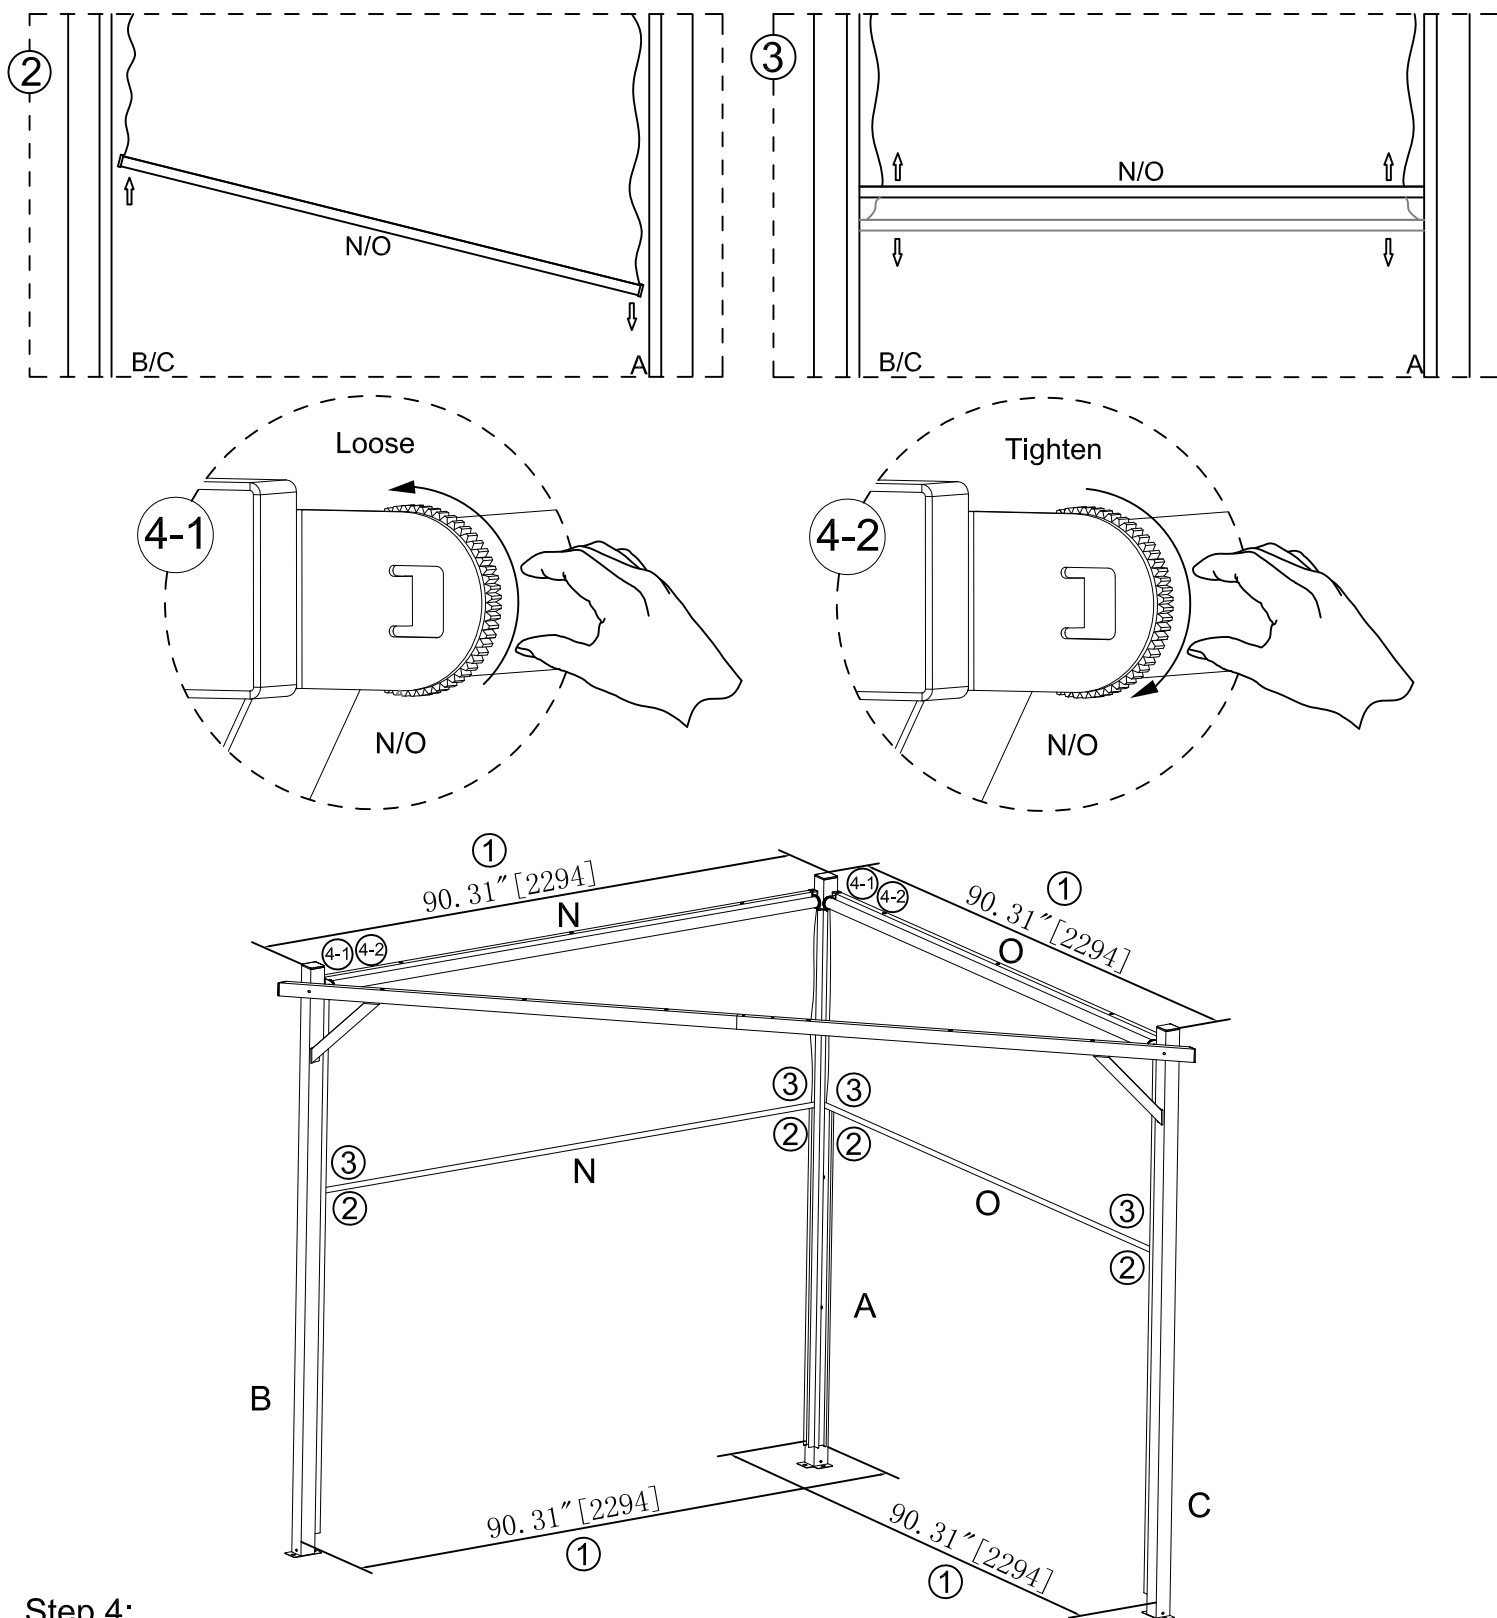

Step 4:


As illustrated, depending on the patio surface, use proper anchoring devices. Anchors are not supplied.

Please ensure that the posts (A, B & C) and ground are level & perpendicular with each other once the unit is assembled. Then, pull the side panel systems of the crossbars (N & O) down until each side of the panel is inserted into the groove of the posts (A, B & C) as shown in fig. 2 & 3. The side panels can be adjusted by rotating the gears as shown in the fig. -4-1 & 4-2. Adjust the gears to the appropriate pulling force.

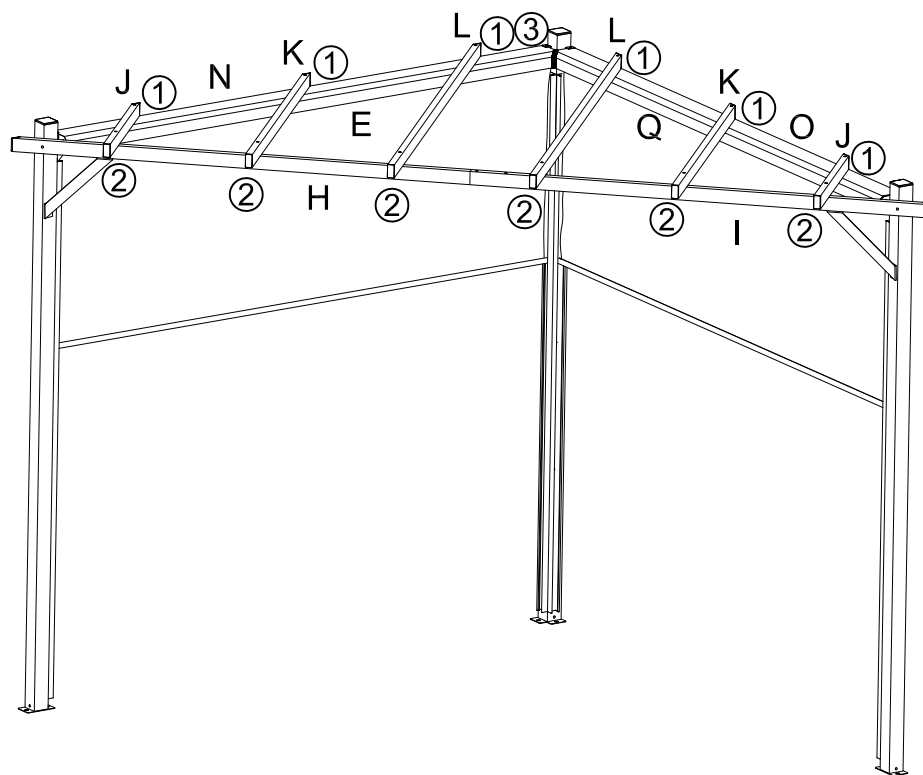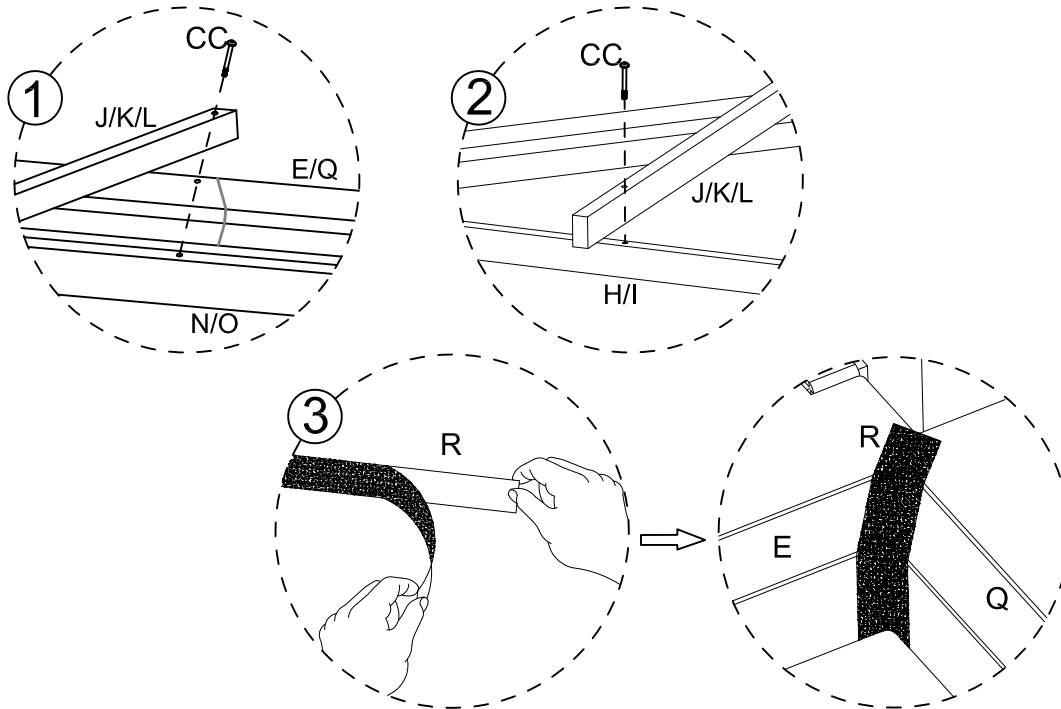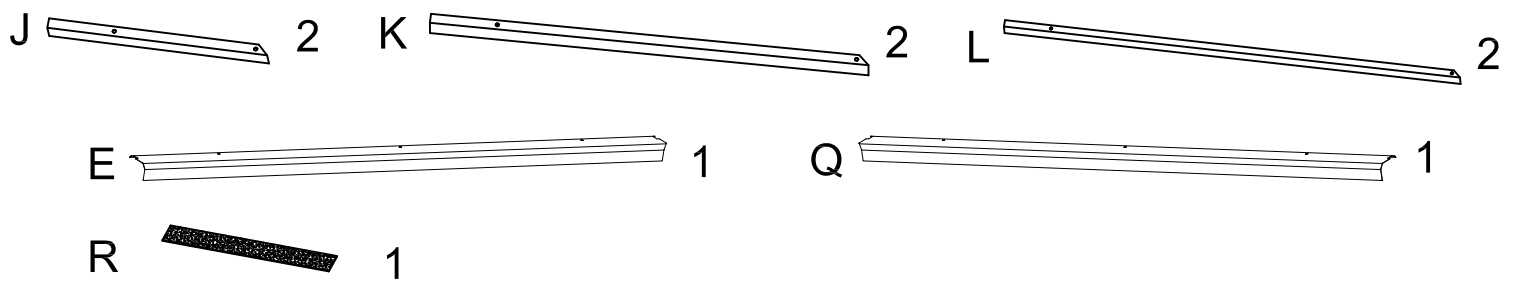

Step 5:

Install the side panel covers (E & Q) onto the crossbars (N & O). Then, fix the roof tubes (J, K & L) onto the crossbars (H/I, N & O) by using the bolts M6x70mm (CC) as shown. Tear the back film of the adhesive tape (R) and stick it in the gap of the side panel cover (E & Q) as shown in fig. 3.

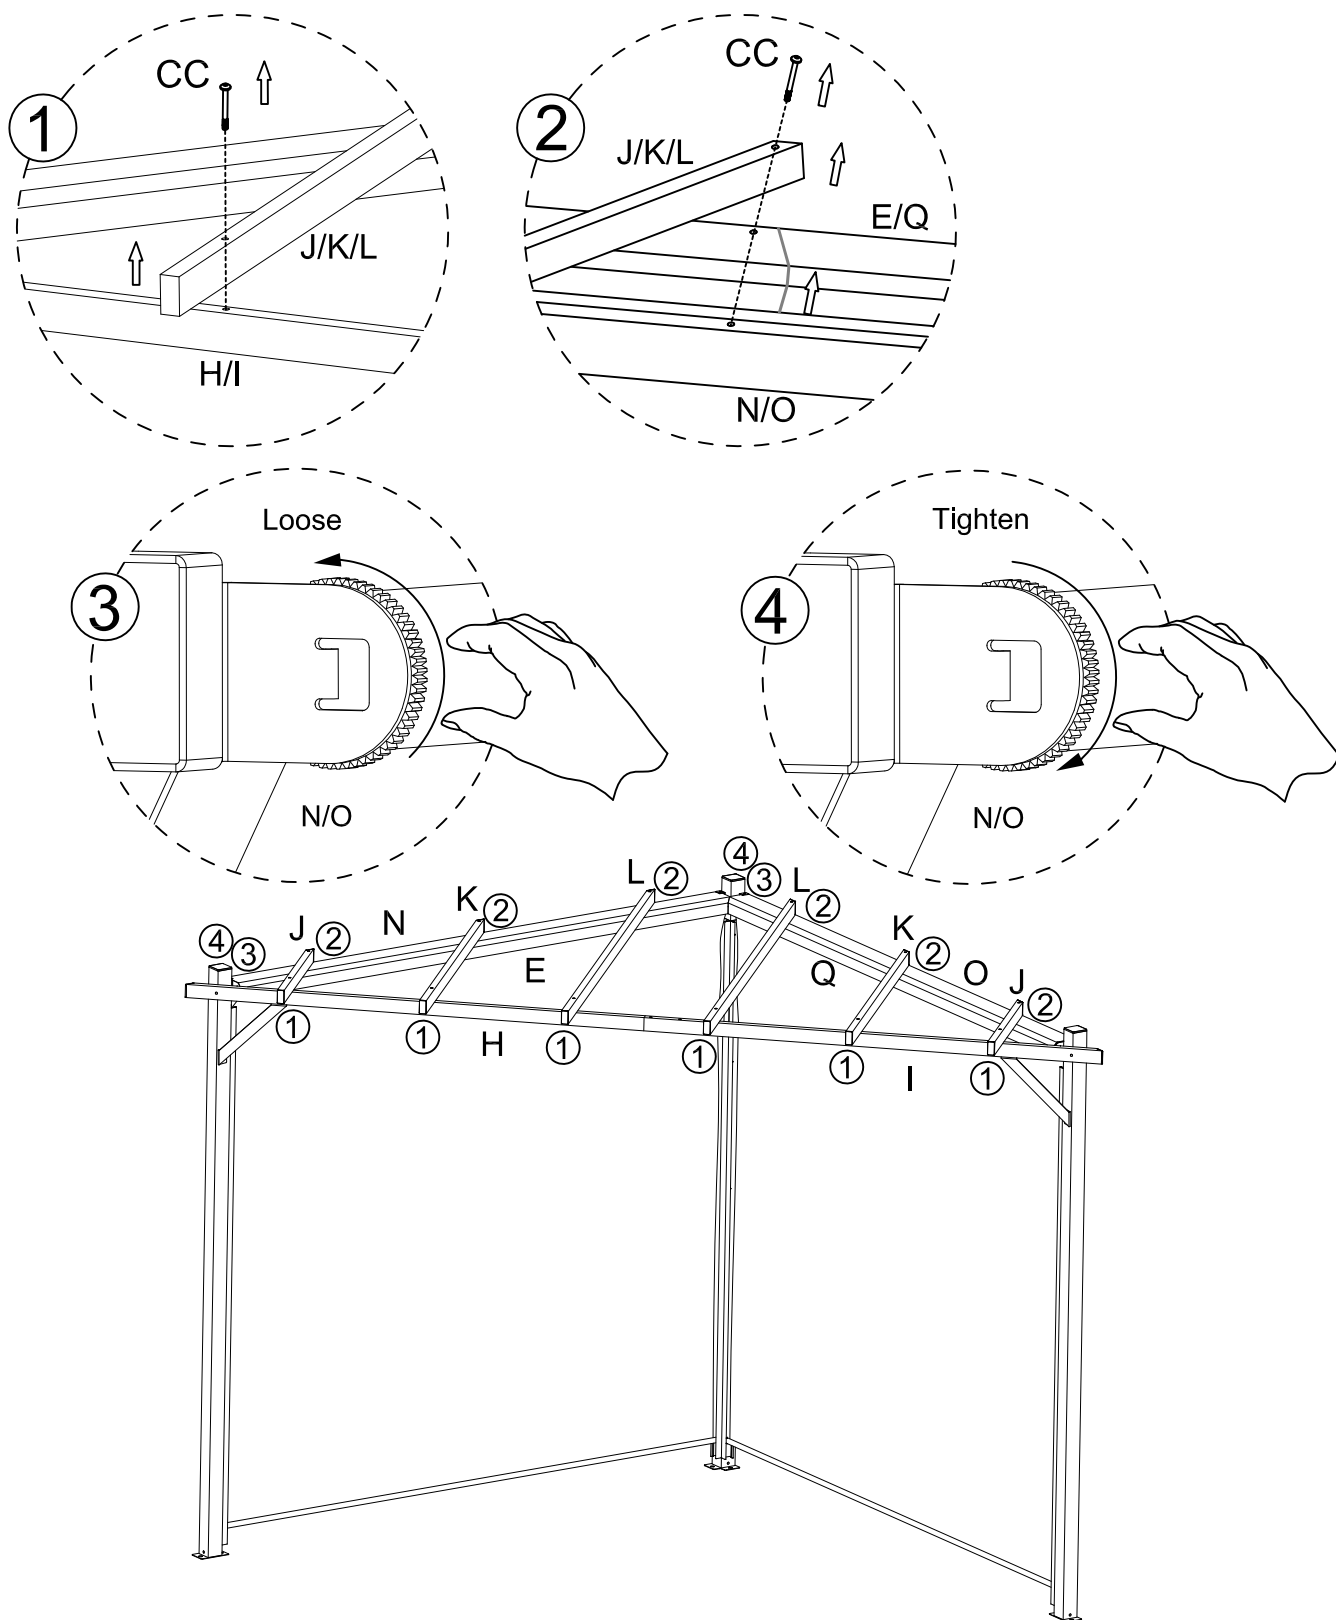

Please note: If you need to readjust the side panel pulling force, remove the bolts M6x70mm (CC), remove the roof tubes (J, K & L), then remove the side panel cover (E or Q). Then, rotate the gear to the appropriate force. Then, reassemble according to the step 5.

The 2 sides panels should be close if there are strong winds or a storm, also when you finish the usage of this pergola.

We wish you a lot of good moments with your new Corriveau Essentiels pergola!