



Armoire à pharmacie

Medicine Cabinet


Guide d'installation

Installation Guide


Outils requis pour l'installation / Tools required for installation

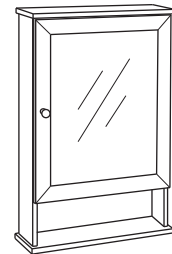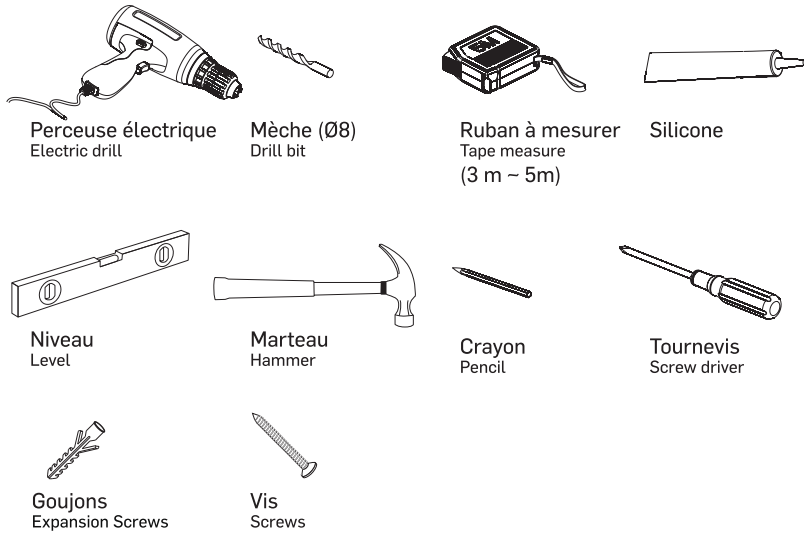


LUISA 3041229 / 3041245

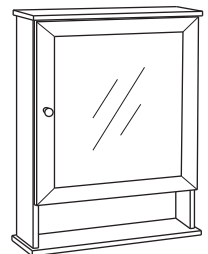

MARIA 3041230 / 3041246

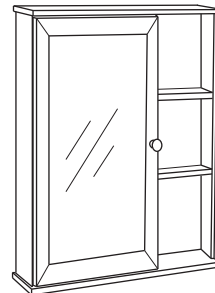


MARIA 3041231 / 3041247

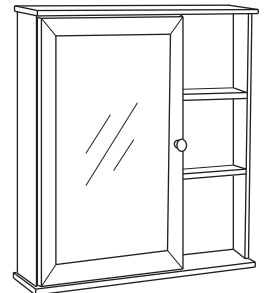


MARIA 3041232 / 3041248



Trous à l'arrière de l'armoire pour montage mural Holes at back of cabinet for wall mount



Arrière
Back



Côté
Side

1. L'armoire à pharmacie est livrée avec des trous prépercés au dos de l'armoire. Fixez l'armoire à pharmacie au mur à l'endroit désiré en préperçant le mur, puis en insérant les goujons fournis.
 2. Fixez l'armoire à pharmacie au mur en insérant les vis à travers les trous sur le panneau arrière de l'armoire, dans les goujons.
 3. Serrez les vis pour fixer l'armoire à pharmacie au mur.
1. The medicine cabinet comes with pre-drilled holes on the back of the cabinet. Attach the medicine cabinet to the wall in the desired location by pre-drilling the wall and inserting studs provided.
 2. Secure the medicine cabinet to the wall by inserting screws through holes on the back panel of the cabinet into the studs.
 3. Tighten screws to secure the medicine cabinet to wall.

CMG12-2017

LUISA / MARIA

3041229 - 3041230 - 3041231 - 3041232
3041245 - 3041246 - 3041247 - 3041248

TASSILI.CA

Fabriqué et emballé en Chine /
Made and Packaged in China
Importé par NOVELCA
Québec, Canada G2E 5W2



TASSILI SUPRA®