

ROBINET DE BAIN AVEC DOUCHETTE


BATHTUB FAUCET WITH HAND SHOWER

GUIDE D'INSTALLATION





INSTALLATION GUIDE

OUTILS NÉCESSAIRES

TOOLS REQUIRED

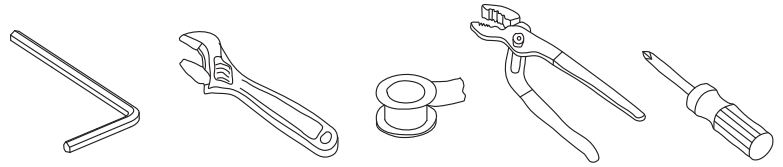

ÉTAPE 1 **1** **Coupez l'alimentation d'eau avant de commencer l'installation.**
STEP **1** **Shut off the main water supply before beginning installation.**

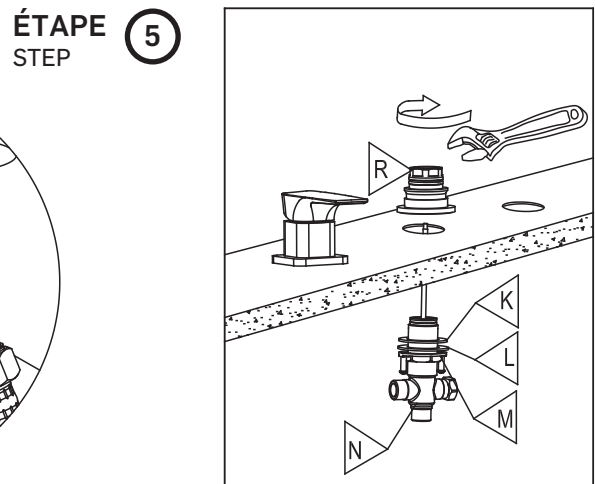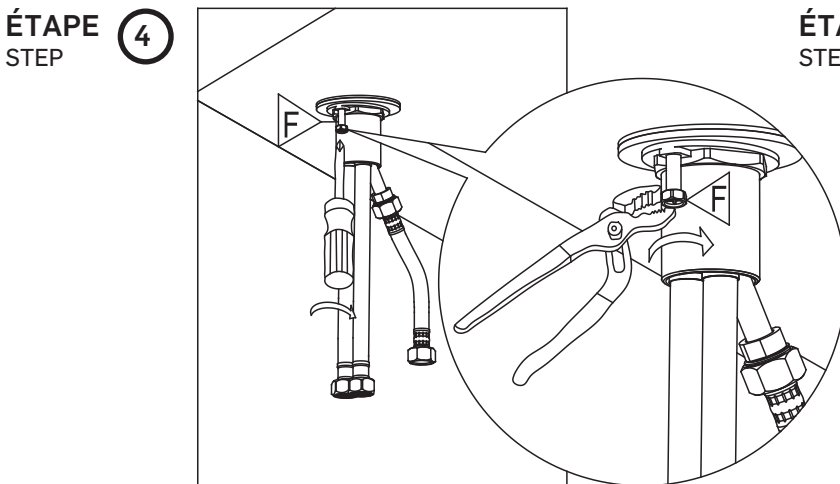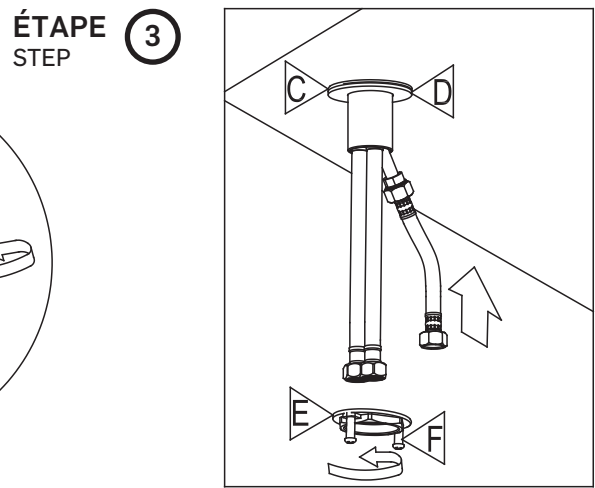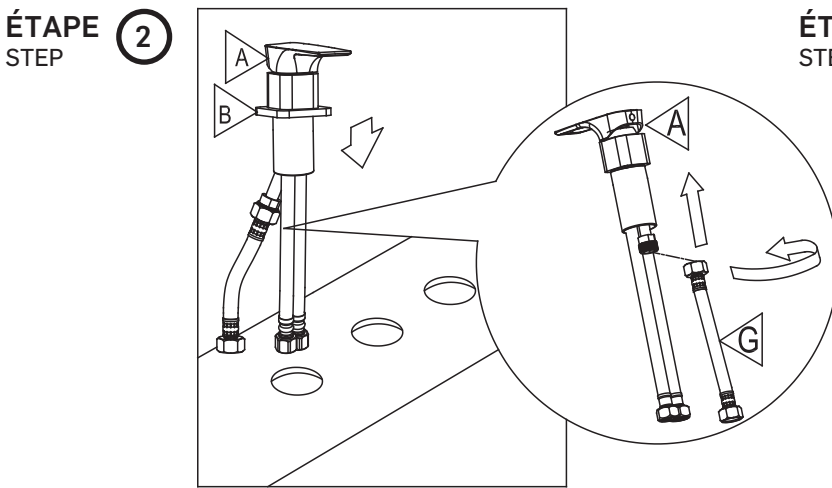


T0421

LECCO	FINI CHROME FINISH
3051594	TASSILI.CA




TASSILI®


ÉTAPE
STEP 6

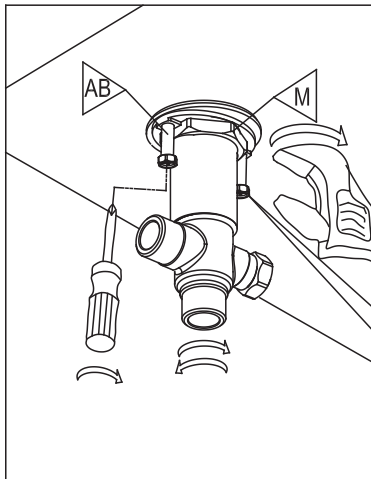


ÉTAPE
STEP 7

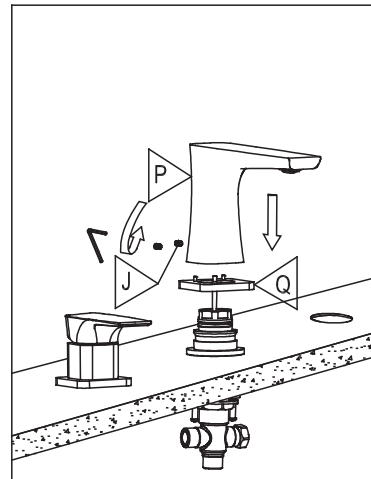


ÉTAPE
STEP 8

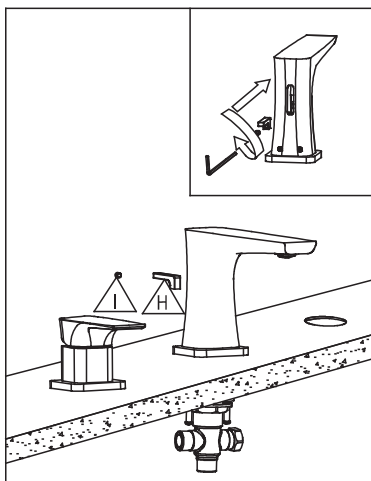


ÉTAPE
STEP 9

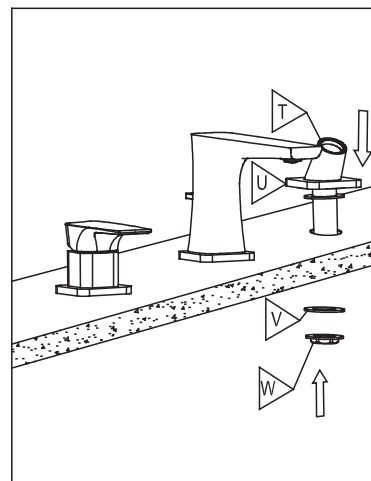

ÉTAPE
STEP 10

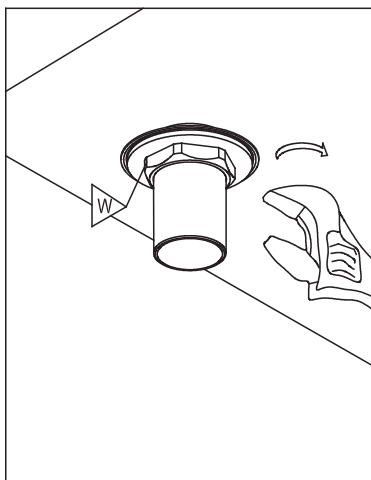

ÉTAPE
STEP 11

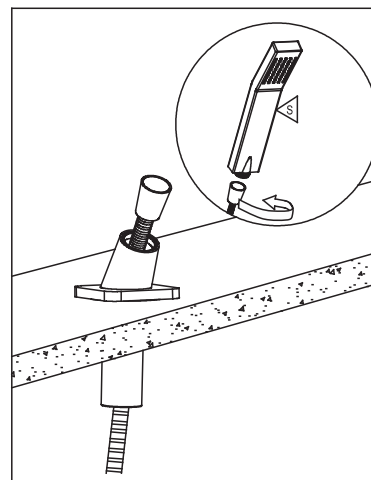

ROBINET DE BAIN AVEC DOUCHETTE


BATHTUB FAUCET WITH HAND SHOWER

GUIDE D'INSTALLATION

INSTALLATION GUIDE


ÉTAPE 12

STEP

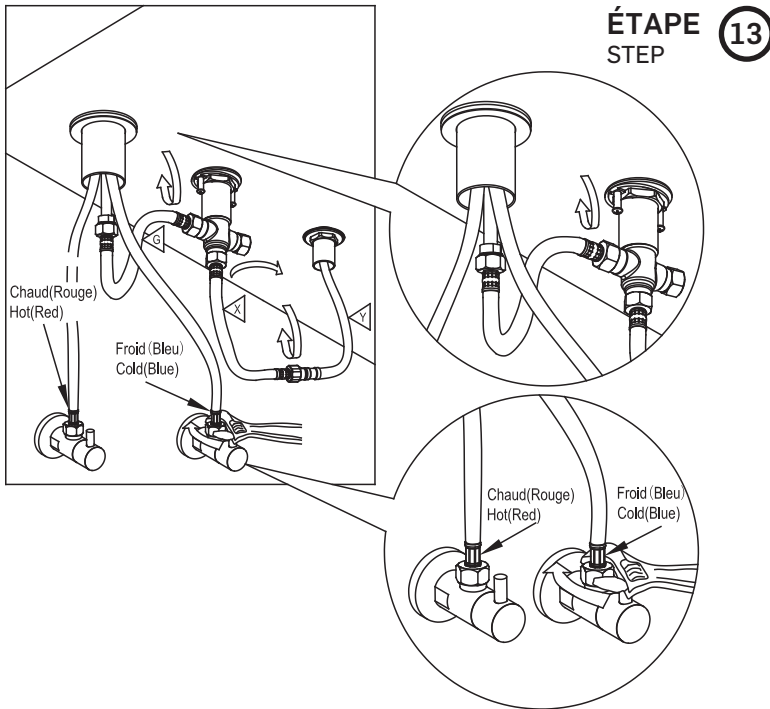


ÉTAPE 13

STEP

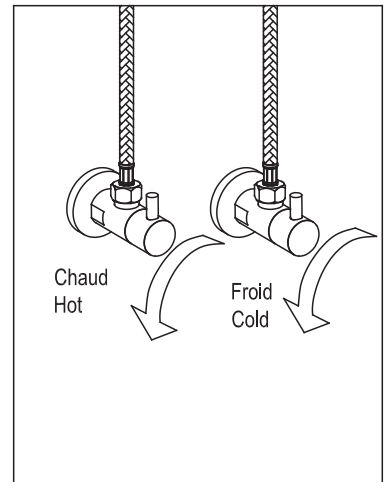


ÉTAPE 14

STEP

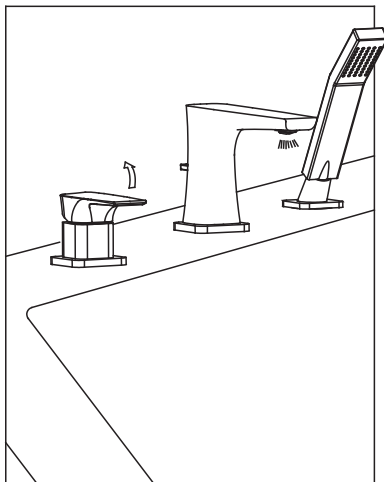

ÉTAPE 15

STEP

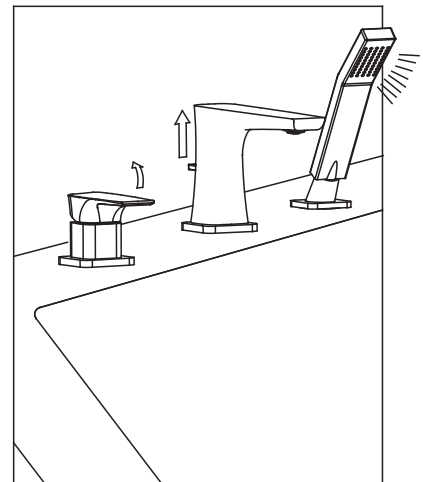

T0421

***IMPORTANT :** Aucune construction ne devrait être effectuée par l'installateur sans avoir le produit en main. Les mesures pourraient varier en raison de perfectionnements apportés au produit au fil du temps. Ni le fabricant, ni le distributeur ne pourront être tenus responsables d'un écart entre les mesures présentées ici et les mesures réelles du produit. Ce produit devrait être installé par un professionnel certifié, conformément à la réglementation en vigueur.

***CAUTION:** Never install unless you are in possession of the product. Measurements may vary as a result of improvements made to the product over time. Neither the manufacturer nor the distributor shall be liable for variances between the measurements shown here and the product's actual measurements. This product should be installed by a certified professional, in accordance with the regulations in effect.