

ROBINET DE BAIN AVEC DOUCHETTE


BATHTUB FAUCET WITH HAND SHOWER

GUIDE D'INSTALLATION





INSTALLATION GUIDE

OUTILS NÉCESSAIRES

TOOLS REQUIRED

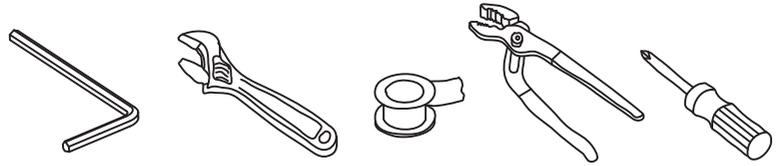

ÉTAPE 1 **1** Coupez l'alimentation d'eau avant de commencer l'installation.
STEP Shut off the main water supply before beginning installation.

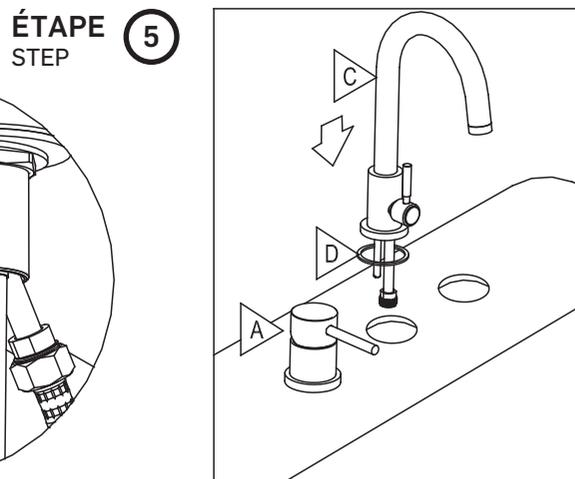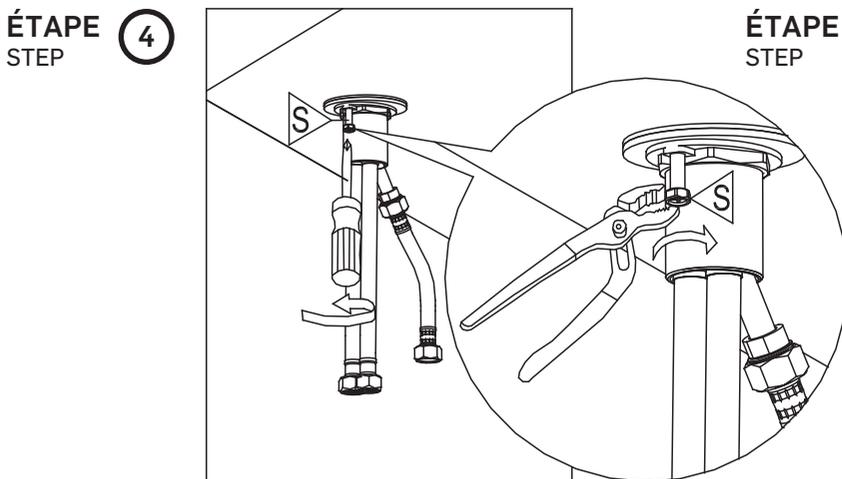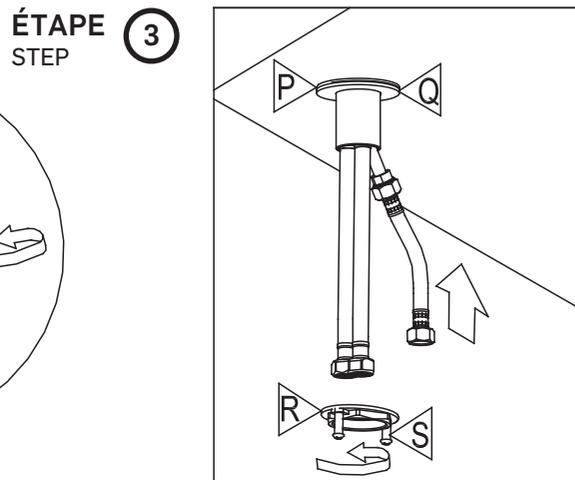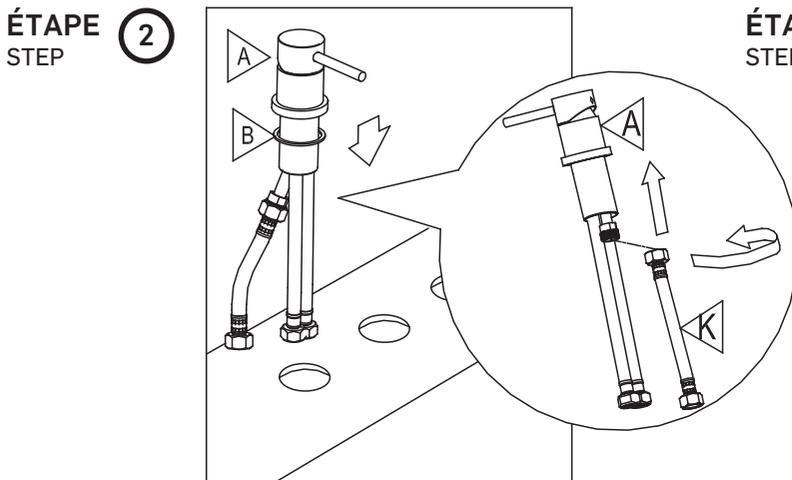


TS0421

OTTAVIO	FINI CHROME FINISH
3051690	TASSILI.CA




TASSILI SUPRA®


ÉTAPE 6
STEP

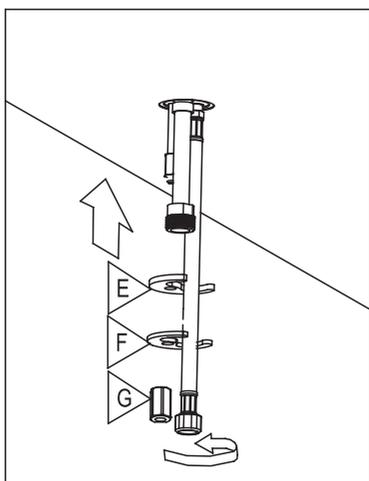


ÉTAPE 7
STEP

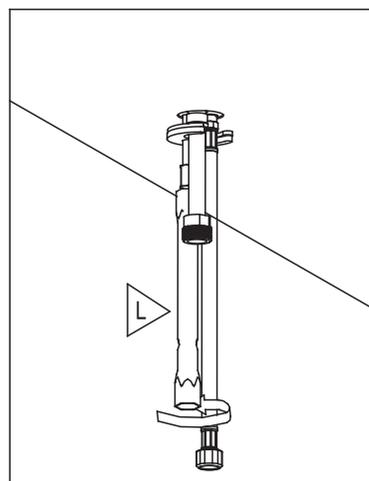

ÉTAPE 8
STEP

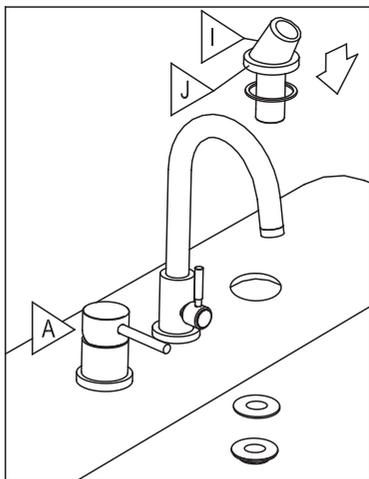

ÉTAPE 9
STEP

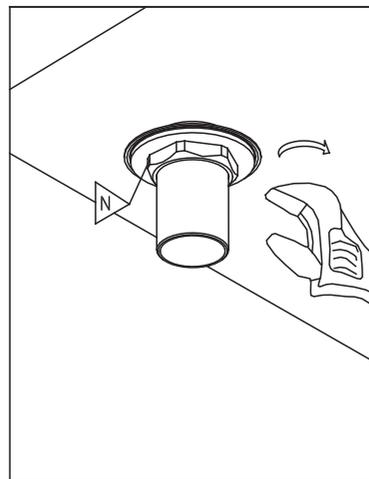

ROBINET DE BAIN AVEC DOUCHETTE


BATHTUB FAUCET WITH HAND SHOWER

GUIDE D'INSTALLATION

INSTALLATION GUIDE


ÉTAPE 10

STEP

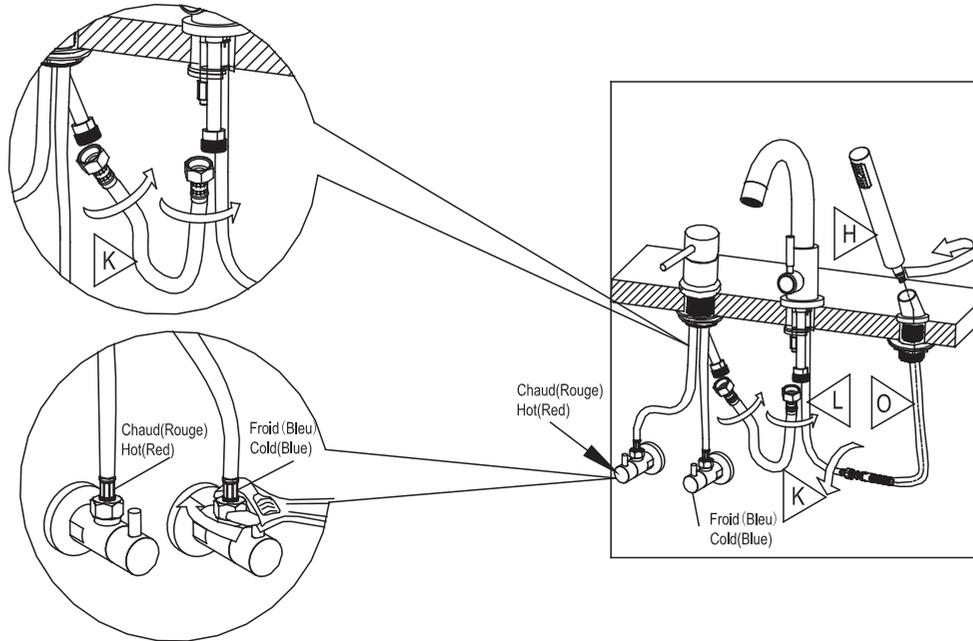


ÉTAPE 11

STEP

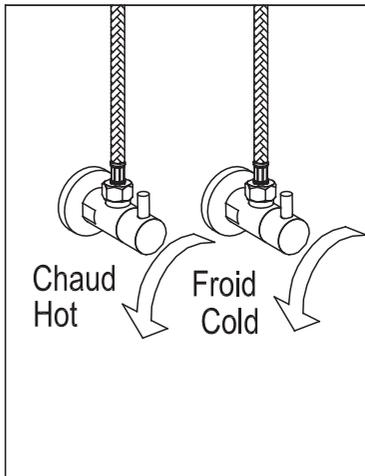

ÉTAPE 12

STEP

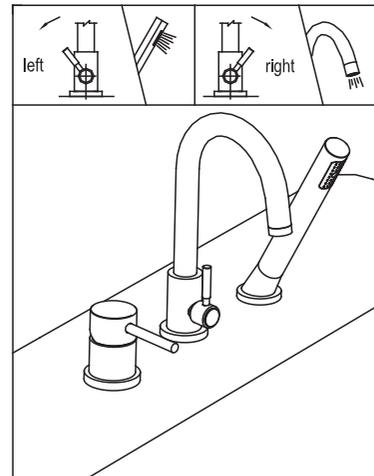

TS0421

***IMPORTANT :** Aucune construction ne devrait être effectuée par l'installateur sans avoir le produit en main. Les mesures pourraient varier en raison de perfectionnements apportés au produit au fil du temps. Ni le fabricant, ni le distributeur ne pourront être tenus responsables d'un écart entre les mesures présentées ici et les mesures réelles du produit. Ce produit devrait être installé par un professionnel certifié, conformément à la réglementation en vigueur.

***CAUTION:** Never install unless you are in possession of the product. Measurements may vary as a result of improvements made to the product over time. Neither the manufacturer nor the distributor shall be liable for variances between the measurements shown here and the product's actual measurements. This product should be installed by a certified professional, in accordance with the regulations in effect.